

美的吸尘器 使用说明书


VACUUM CLEANER OPERATION INSTRUCTIONS MANUAL

T3-L151E1 / T3 Pro

江苏美的清洁电器股份有限公司

 通讯地址：苏州市相城经济开发区漕湖大道39号 邮政编码：215000

 400-8899-315  24h 服务热线 免长途  www.midea.com

 执行标准：GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012
版本号：T3-L151E110-06-R1.2 / T3 Pro10-06-R1.2

Jiangsu Midea Cleaning Appliance Co.,Ltd

 Address：No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou Post：215000

 400-8899-315  24h HOT LINE FREE  www.midea.com

 Executive standard：GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012
Version No.：T3-L151E110-06-R1.2 / T3 Pro10-06-R1.2



使用产品前请仔细阅读本说明书，并请妥善保管。

Please keep this instruction Manual carefully, and read it before operate product

目录

 
Contents

产品介绍	Product Introduction	2
使用说明	Product Operation	4
维护保养	Product Maintenance	8
异常处理	Troubleshooting	10
安全说明	Safety Introduction	12
保修须知	Warranty Information	14

产品介绍

Product Introduction

- ① 主机 Main Body
- ② 软管 Hose
- ③ 金属伸缩管 Metal Telescopic Tube
- ④ 附件挂架 Accessory Holder
- ⑤ 主地刷 Main Brush
- ⑥ 吸水刷 Water Suction Brush
- ⑦ 长扁吸 Long Crevice Tool
- ⑧ 小圆刷 Dusting Brush
- ⑨ 宽扁吸 Wide Crevice Tool
- ⑩ 万向轮 Caster
- ⑪ 电源线 Power Cord

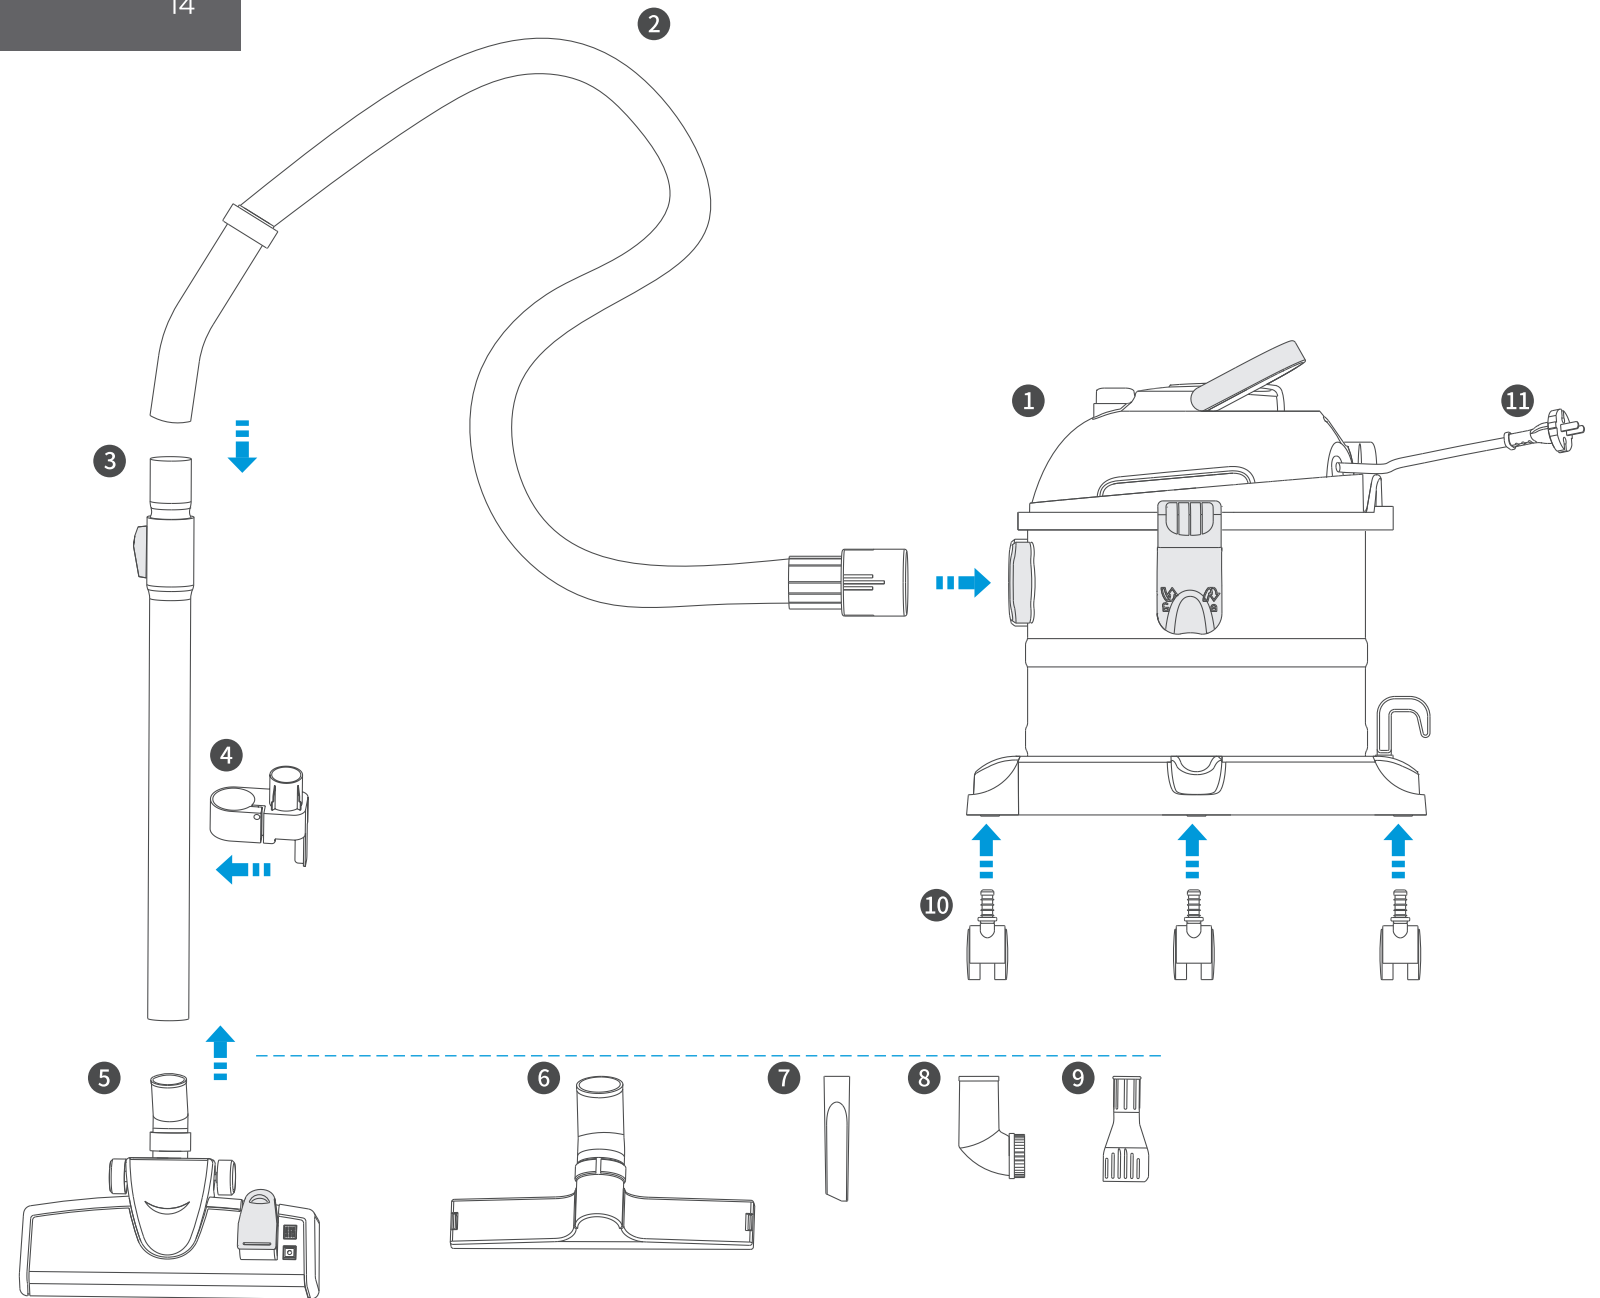

提示：当清洁高的地方，附件可安装在金属管上。

Tips: Accessories can be connected with extension tube when cleaning high position.

 
使用说明 Product Operation

首次组装附件

First Assembly

请按照下图指示，完成产品组装

Please assembly the product as the follow pictures shown.

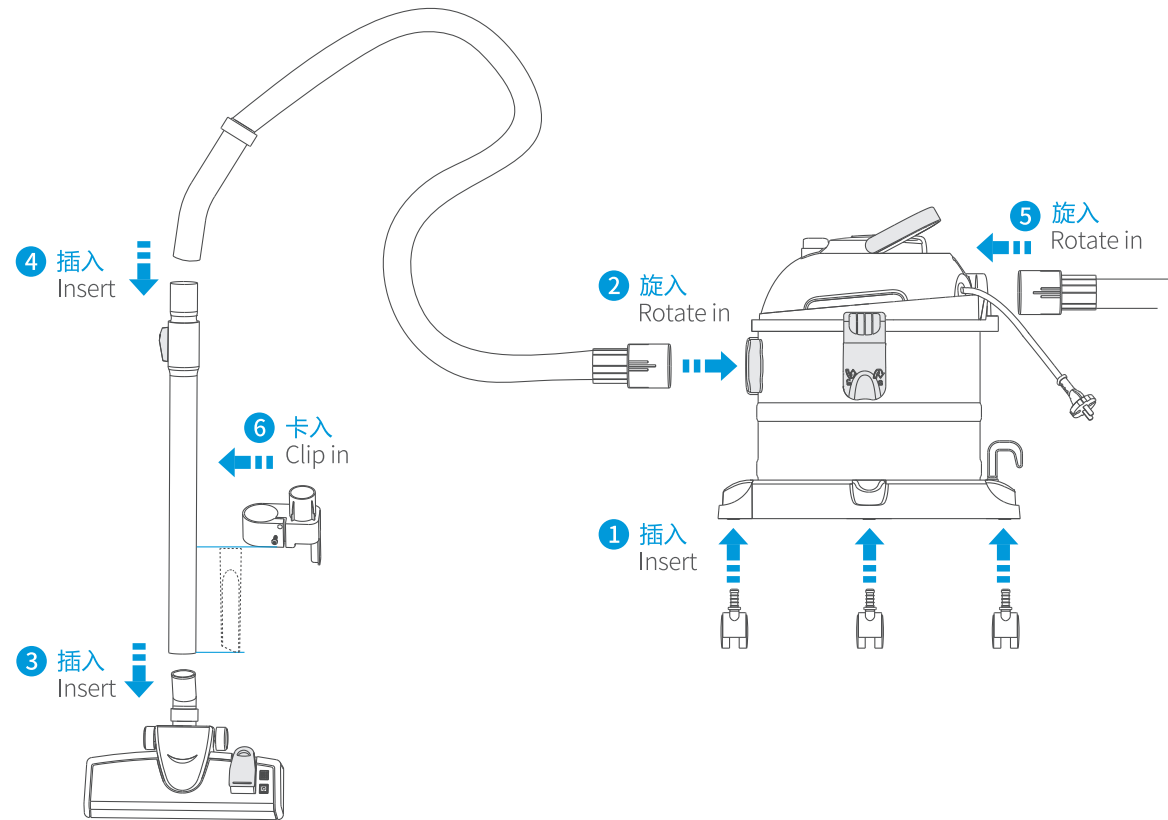

01. 万向轮与吸尘器连接：吸尘操作前，请将万向轮接头插入桶体万向轮接口即可。
Connect caster and cleaner : Before cleaning, please put casters into cleaner.

02. 软管与吸尘器进风口连接：吸尘操作前，请将软管接头顺时针旋转插入桶体进风口即可，如要拆卸则逆时针旋转拔出即可。
Connect hose and air intake : Before cleaning, please put the hose into cleaner clockwise. If want to disassembly, rotate anticlockwise and pull out it.

03. 金属伸缩管与地刷连接：金属伸缩管接口对准地刷接头，请施加插力并转动以便能连接牢固，拆卸时加以旋动力方便拔出。
Connect metal tube and brush : Put tube to brush correctly and rotate it to connect securely. Rotate it for disassembling easily.

04. 软管与金属伸缩管连接：金属伸缩管接口手柄，请施加插力加以转动以便能连接牢固，拆卸时加以旋动力方便拔出。
Connect hose and metal tube : Put tube to hose correctly and rotate it to connect securely. Rotate it for disassembling easily.

05. 软管与吸尘器出风口连接：吹风操作前，将软管接头顺时针旋转插入出风口即可，如要拆卸则逆时针旋转拔出并装回出风接头即可。
Connect hose and outlet : Before blowing, please put the hose into cleaner clockwise. If want to disassembly, rotate anticlockwise and pull out it.

06. 金属伸缩管与附件挂架连接：将挂架按图示卡入金属伸缩管后，打上螺丝。如图所示挂架位置可将长扁吸作为参考，用户可根据需要稍作调节。
Connect the tube and holder: Clip the holder in metal tube and then drive a screw. Position of the holder can be confirmed by long crevice as picture shown, it can be adapted by yourself slightly.

 
其他附件说明

配件使用


Other accessories

Use of accessories


长扁吸：适用于吸家具缝隙，角落，天花板等小缝隙处的灰尘及毛条。
Long crevice tool : It is used for cleaning little crevice and corner of furniture or platfond.



 
小圆刷：适用于吸窗缝，角落，沙发缝等小缝隙处的灰尘及毛条。
Dusting bursh : It is used for cleaning little crevice and corner of sofa or window.

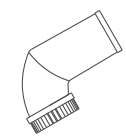

 宽扁吸：此附件有较大吸口，使用轻便，适用于吸附床单，沙发窗帘等较大面积除尘的需求。
Wide crevice tool : It has big suction nozzle, it is used for big area dust cleaning, such as bedclothes, blind, sofa.




 吸水刷：吸水刷具有刮条，适用于积水地面等较大面积除脏污的需求。
Water suction brush : It is used for suctioning water.

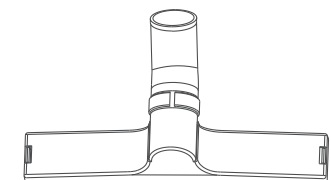

主地刷：主地刷强劲吸尘，适用于干燥地面等较大面积除尘的需求。

 Main brush : The main brush has big suction and it is used for dry floor board.

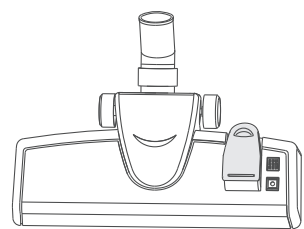


清扫

首次操作

Cleaning

 First Use

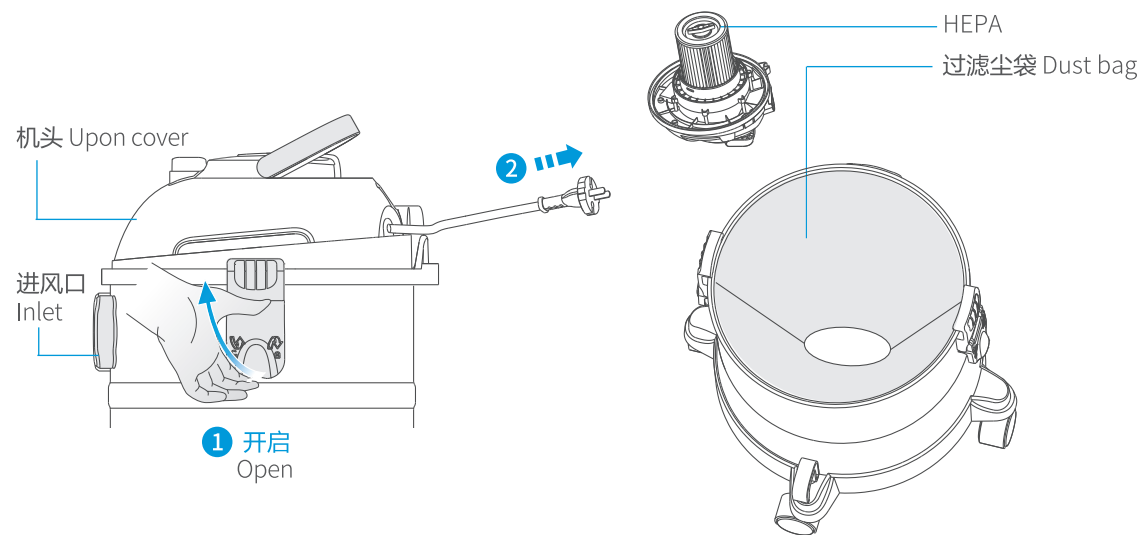

01. 检查集尘：开启卡口，打开筒体，确保过滤尘袋及HEPA已经装配到位。

 
Check dust bag : Open upon cover to make sure dust bag and HEPA have been assembled.

02. 放下电源线连接电源：吸尘器使用把电源线放置地面，并将插头插入插座。

Lay down and connect power cord : When using it, lay down the power wire and insert plug into base.

03. 按下开关按钮：桶吸的启动与停止。

Press switch button : Turn on and off.

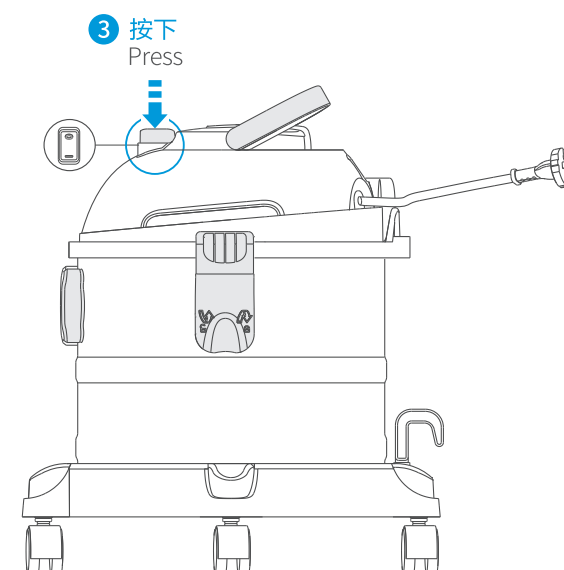

注意 Caution

 
1. 过滤尘袋及HEPA未装配到位切勿使用。
 2. 切勿把电源线盘在桶吸机头四周，堵住进风口和出风口，导致至桶吸过热损坏电机。
1. Don't use the unit, if dust bag or HEPA is not placed well.
2. Don't coil wire around body, it may block air inlet and outlet, lead to motor breaking.

维护保养 Product Maintenance

倾倒灰尘
Dust Fall


01. 开启桶吸机头/装回机头：开启卡口按钮，取出机头，取出尘袋。

Open upon cover/Assembly upon cover: Open fastener and get out dust bag.

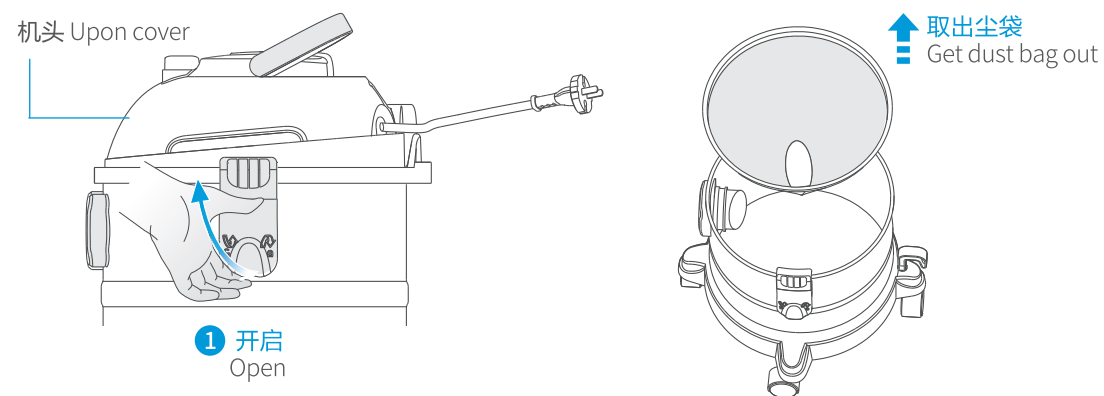

02. 倾倒垃圾：倾斜桶体，倒出垃圾。

 Pour out dirty: Lean the body and pour out dirty.

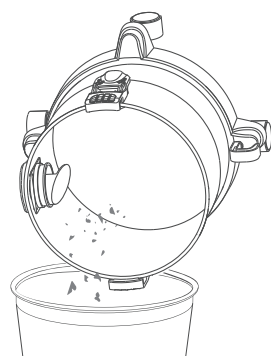

维护保养 Product Maintenance

维护保养
Product Maintenance

 
01. 尘袋清理：取出尘袋，尘袋在使用后需要不定期清理，以免堵塞影响吸力。

Dust bag cleaning: Get out dust bag, it need to clean frequently for not being blocked.



02. HEPA清洗：旋转开启卡扣旋钮，取出HEPA，HEPA在使用后需要不定期清理，以免堵塞影响吸力。

HEPA cleaning: Rotate button, get out HEPA, it need to clean frequently for not being blocked.

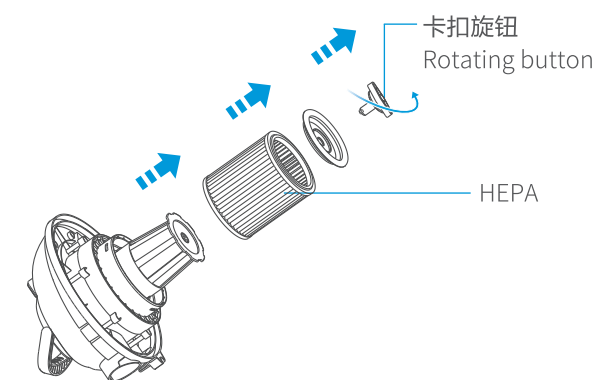

! 注意 Caution

过滤尘袋及HEPA在使用后需要不定期清理，以免堵塞影响吸力。

After cleaning, dust bag and HEPA need to be clean frequently for not being blocked and affecting suction.

异常处理

本品在使用时如发现异常，请先查阅下表。

异常情况	可能原因	处理方法
吸尘器完全不工作	<ul style="list-style-type: none"> - 电源插头未在插座上插牢 - 电源插座没有电 - 吸尘器开关没有打开 	<ul style="list-style-type: none"> - 重新插入插头 - 检查断路器 - 按下机器的电源开关
吸力减弱	<ul style="list-style-type: none"> - 管路通道堵塞 - 桶体中水位过高 - 尘袋或HEPA积灰严重 	<ul style="list-style-type: none"> - 清理堵塞物 - 清空积水 - 清理HEPA及尘袋

其他无法处理的故障，请联系当地售后服务网点或拨打全国服务热线：400 8899 315

TROUBLESHOOTING

In case of malfunction, please refer to the following table.

Problem	Possible causes	Solution
Not working	<ul style="list-style-type: none"> - Plug not insert correctly - Plug base don't have electricity - Switch not open 	<ul style="list-style-type: none"> - Insert the plug again - Check circuit switch - Open the switch
Suction weaken	<ul style="list-style-type: none"> - The wind channel is blocked - Water level is too high - Dust stratification seriously 	<ul style="list-style-type: none"> - Clean channel - Empty water - Clean dust bag and HEPA

For other failures, please contact the local service outlet or call the service hotline:400-8899-315

中国RoHS



零部件名称	中国RoHS管控制物质或元素						备注：
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚	
电子电路	×	○	○	○	○	○	<p>1. 本表格依据SJ/T 11364的规定编制。</p> <p>2. ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。</p> <p>3. ×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。</p> <p>4. 本表中的有×的所有部件均符合欧盟的RoHS指令，即“欧洲议会和理事会关于在电子电气设备中限制使用某些有害物质的第2011/65/EU号指令”及其修正案。</p>
开关	○	○	○	○	○	○	
电源线	×	○	○	○	○	○	
电机组件	○	○	○	○	○	○	
电机罩组件	○	○	○	○	○	○	
金属伸缩管	○	○	○	○	○	○	
软管组件	○	○	○	○	○	○	
过滤组件	○	○	○	○	○	○	
桶体组件	○	○	○	○	○	○	
底座组件	○	○	○	○	○	○	
上盖组件	○	○	○	○	○	○	
中框组件	○	○	○	○	○	○	

CHINA RoHS



Name of parts	Chinese RoHS controlled substances or elements						Remarks:
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBBs)	(PBDEs)	
Electronic circuit	×	○	○	○	○	○	<p>1. This table is formulated based on the provisions of SJ / T 11364.</p> <p>2. ○：Indicates that the content of this hazardous substance in all the homogeneous materials of the part is lower than the limit requirement prescribed in GBSJ / T 26572.</p> <p>3. ×：Indicates that the content of this hazardous substance in a certain homogeneous material of the part has exceeded the limit requirement prescribed in GB/T 26572.</p> <p>4. All the parts with * in this form are in accordance with EU RoHS instructions, namely "No. 65/2011 / EU Instruction of European Parliament and Council on Restrictions on the Use of Certain Hazardous Substances in Electrical and Electronic Equipment" and its amendment.</p>
Switch	○	○	○	○	○	○	
Power cord	×	○	○	○	○	○	
Motor assembly	○	○	○	○	○	○	
Motor cover assembly	○	○	○	○	○	○	
Metal extension tube	○	○	○	○	○	○	
Hose assembly	○	○	○	○	○	○	
Filter assembly	○	○	○	○	○	○	
Bin assembly	○	○	○	○	○	○	
Base assembly	○	○	○	○	○	○	
Upon cover assembly	○	○	○	○	○	○	
Mullion assembly	○	○	○	○	○	○	

安全说明



- 请勿将吸尘器接近热源，辐射或者燃烧的烟头，严禁吸入下列物体，
 1. 水及溶剂等一切液体。
 2. 石灰、水泥灰等建筑粉尘及垃圾。
 3. 发热物体，如未熄灭碳头、烟头。
 4. 锐利碎片，如玻璃等。
 5. 易燃易爆物品，如汽油或酒精制品。
- 切勿让小孩玩弄、操作吸尘器，以免发生意外；
- 您的吸尘器是一台电动器具：它必须按照正常使用条件进行使用，切莫让吸尘器在无人看管情况下独自运转；
- 清洁、维修或暂时不用吸尘器时，必须切断电源；
- 切断电源：不可拉电源线，应用手拿住插头塑料部位拔下插头；
- 检查确认供电电压必须与吸尘器使用电压一致；
- 吸尘器的电源线，不要让它穿越锋利的物品，以免损坏电源线；
- 切忌将吸尘器浸入水中，避免接近发热器具或暴晒，以免发生火灾；
- 下列情形时，请不要使用吸尘器，并及时送至本公司指定的维修部检修
 1. 发生跌落并出现明显损坏或运转不正常；
 2. 电源线破损；
- 避免在吸入口堵住的状态下长时间运行，以免电机损坏及吸尘器发热变形。

SAFETY INSTRUCTIONS



- Do not place the appliance close to heat sources, radiation, or burning cigarette. Do not use the appliance to remove the following objects.
 - 1) All liquids such as water and solvents.
 - 2) Lime, cement, ash and other construction dust and garbage.
 - 3) Hot objects, such as cigarette butts.
 - 4) Sharp objects, such as glass shards, etc.
 - 5) Inflammable and explosive articles, such as gasoline or alcohol products.
- Do not let children play with or operate the appliance to prevent accidents.
- Your appliance is an electric appliance: It must be used appropriately. Do not leave the operating appliance unattended.
- The power must be turned off during cleaning, maintenance or when in storage.
- Do not pull the power plug to turn off the appliance. Hold the plastic part of the plug to remove it from the power socket.
- The power supply voltage must correspond to that of the appliance working voltage.
- Keep the power cord away from sharp objects to prevent it from being damaged.
- To prevent fires do not immerse the appliance in water, do not expose it to any heating appliances.
- In the case of below situations do not use the appliance and send it immediately to the nearest approved maintenance facility :
 - 1) The appliance fell and consequently damaged
 - 2) The power cord is damaged
- Stop operating the appliance if the suction inlet is blocked to prevent damages (such as overheating) to the motor or deformations to the vacuum plastic parts occasioned by overheating motor.

保修须知

美的真空吸尘器严格遵照国家“三包”规定进行保修服务
用户在正常使用产品的情况下，提供相关免费维修服务



- 家庭整机保修两年，电机保修三年，充电产品的充电器、电池保修半年；
- 非家庭整机及其主要部件保修半年；
如：经营、商用、公司集体的产品。
- 保修期内用户可享受免费上门维修（特殊地区除外）服务；
“免费上门维修”限桶吸产品。
- 保修期界定：
 - 1.以有效保修凭证的开具日期作为保修期的起始日期；
 - 2.没有有效保修凭证的，按出厂日期后6个月作为保修期的起始日期；
 - 3.若既无有效保修凭证也无出厂日期的，则按该产品的最早上市日期后6个月作为保修期的起始日期；
 - 4.网购产品15天界定期以收货日期计算，后期保修可按发票日期计算。
- 保修期内维修更换的零部件归本公司所有，保修期外维修更换的零部件归用户所有；
- 其他事项按照国家“三包”规定执行；
- 凡属下述情况之一的，不在保修范围内：
 - 1.吸尘器附件（金属伸缩管/塑料接插管、软管、地刷、小附件等），耗材（滤芯、集尘袋等）和赠品；
 - 2.用户搬运、使用、维护、保管不当而损坏的；
 - 3.使用充电电压低于187V或者高于240V而损坏的；
 - 4.未按产品使用说明书要求使用、维护、保养而造成损坏的；
 - 5.非本公司专业服务人员拆卸、维修的；
 - 6.因不可抗力（如雷电、火灾、地震、水灾等自然灾害）造成损坏的；
 - 7.产品超出保修期的；
 - 8.发票或保修卡上记录的型号或编号与商品实物不符合的。
- 以上情况我公司将实施收费维修，费用类型包括维修费、零部件费，具体费用标准在相关部门允许范围内。
- 由代理商、经销商、零售商自行承诺的额外服务与附加的非原厂配置赠品，由原代理商、经销商、零售商负责服务。

⚠ 注意

1. 本产品只限于家用，非家用出现任何问题本公司概不负责。
2. 如您发现产品需要服务时，请直接联系当地特约服务网点或我司服务热线400-8899-315。
3. 如来信，请留下您的联系电话，以便您能尽快得到回复。

WARRANTY INFORMATION

Midea appliance strictly comply with government policies .
Our company provide free maintenance service for the products operated under normal usage.

- The warranty period is two years for residential or home usage, three years for the motor, and six months for charging products and battery.
- The warranty period (including main components) is six months for non residential or non home usage. It applies to, but not limited, business offices, commercial entities, cleaning companies fleet of appliance.
- During the warranty period, you will benefit from no cost home maintenance services (except for some special areas). the no cost maintenance is only applicable to the barrel products.
- **Definition of the warranty period:**
 - (1) The date for issuing the valid warranty certificate should be taken as the starting date of the warranty period.
 - (2) Without a valid warranty certificate, the first day after 6 months from the delivery date should be taken as the starting date of the warranty period
 - (3) If there is no valid warranty certificate, no packaging date, the first day after six months from market release should be taken as the starting date of the warranty period.
 - (4) Date is defined as being 15 days after receiving the products; the warranty period will start from that date.
- **The manufacturer is responsible for replacing the components during the warranty period.**
Components replacement is the responsibility of the user beyond the warranty period.
- **Other matters follow the government policies.**
- **The warranty does not apply to the following situations:**
 - (1) Appliance accessories (metal extension tube/plastic tube, hose, floor brush, small accessories, etc.), some parts (filter, dust bag, etc.) and gifts.
 - (2) The appliance is damaged due to improper usage (including storage) and operation by the user.
 - (3) The appliance is damaged due to incorrect charge voltage utilization (below 187 V or above 240 V).
 - (4) The appliance is damaged due to failure of following procedures as described in this manual for maintenance, cleaning and usage.
 - (5) Disassembly, repair by people other than the company's specialized service personnel.
 - (6) Damages due to natural causes (such as lightning, fire, earthquake, floods and other natural disasters).
 - (7) The warranty period has expired.
 - (8) The product type or serial number noted on the invoice or warranty card is not in conformity with the actual product.
- **If any of the above written situations arise, the user will solely bear all the charges related to the maintenance including the cost of spare parts. The cost is defined according to standard charges.**
- **Any commitment for extra services, additional gifts made by original agents, distributors or retailers are their sole responsibility and the manufacturer cannot be held responsible or liable.**

⚠ Caution

1. This product is limited for home usage and the company is not responsible for any problems caused by other usage.
2. For service, please directly contact the local special service outlet or our service hotline 400-8899-315.
3. Please indicate your contact phone number or email for faster response.

保修卡

WARRANTY CARD

保修卡	维修记录
用户姓名	日期
电话	故障内容
通讯地址(邮编)	产品型号
购买商店	处理内容
维修点	维修单位名称
编号	电话
发票号码	维修员签名
购买时间	

Warranty card	Record of Maintenance
User name	Date
Tel	Problem description
Contact address (Post code)	Product model
	Detailed information
Purchase location name and address	Service technician name
	Tel
Service/maintenance supplier	Service technician signature
Serial No.	
Invoice No.	
Purchase date	

tips 修理时需出具发票 Original proof of purchase (store invoice) is required for any service request.

⚠ 注意 Caution

1. 此保修卡在购买本公司产品时立即填写。
2. 此保修卡请妥善保管，购买者不必将卡寄回本公司。
3. 维修时请携带此证及有效发票正本。

1. This warranty card should be immediately filled after purchase.
2. Keep this warranty card for your records; it does not need to be returned to Midea.
3. Bring / provide the warranty card and original invoice for service requests.

产品参数

产品技术参数

型号	额定电压	额定频率	额定功率	最大功率	容积
T3-L151E1	220 V ~	50 Hz	1200 W	1300 W	15 L
T3 Pro	220 V ~	50 Hz	1300 W	1400 W	20 L

PRODUCT PARAMETERS

Product Technical Parameters

Model	Rated Voltage	Rated Frequency	Rated Power	Max Power	Volume
T3-L151E1	220 V ~	50 Hz	1200 W	1300 W	15 L
T3 Pro	220 V ~	50 Hz	1300 W	1400 W	20 L

