

# 美的智能吸尘器 使用说明书

**ROBOT**

OPERATION INSTRUCTIONS MANUAL

VR05F4-TB


江苏美的清洁电器股份有限公司

 通讯地址:苏州市相城经济开发区漕湖大道39号 邮政编码:215000


 **400-8899-315**  **24h** 服务 热线 免长途  [www.midea.com](http://www.midea.com)

 执行标准: GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012  
版本号: VR05F4-TB10-06-R1.7

Jiangsu Midea Cleaning Appliance Co.,Ltd

 Address:No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou  
Post:215000

 **400-8899-315**  **24h** HOT LINE **FREE**  [www.midea.com](http://www.midea.com)

 **Executive standard:** GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012  
Version No.: VR05F4-TB10-06-R1.7



使用产品前请仔细阅读本说明书，并请妥善保管。

Please read this Instruction manual carefully before operating, and keep it properly.

# 目录


Contents

产品介绍	Product Introduction	2
使用说明	Product Operation	4
维护保养	Product Maintenance	14
异常处理	Troubleshooting	18
安全说明	Safety Introduction	24
保修须知	Warranty Information	26


# 产品介绍

Product Introduction


- |         |                   |         |                               |
|---------|-------------------|---------|-------------------------------|
| 1 主机    | Main body         | 7 滤网    | Filter                        |
| 2 充电电池  | Battery           | 8 使用说明书 | Manual                        |
| 3 电源适配器 | Power adaptor     | 9 遥控器电池 | Battery for remote controller |
| 4 毛刷    | Brush             |         |                               |
| 5 充电座   | Charge station    |         |                               |
| 6 遥控器   | Remote controller |         |                               |

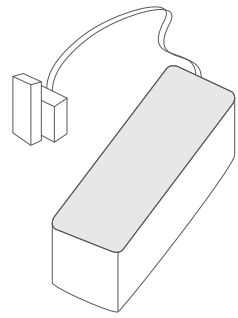


2

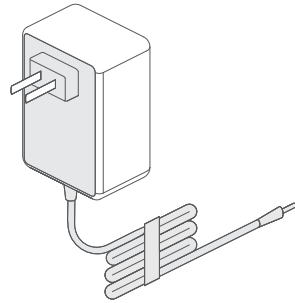

3

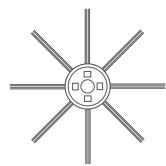


4

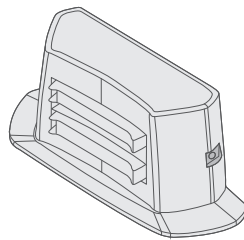

5




6

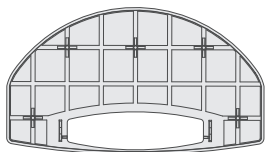


7



 8



9

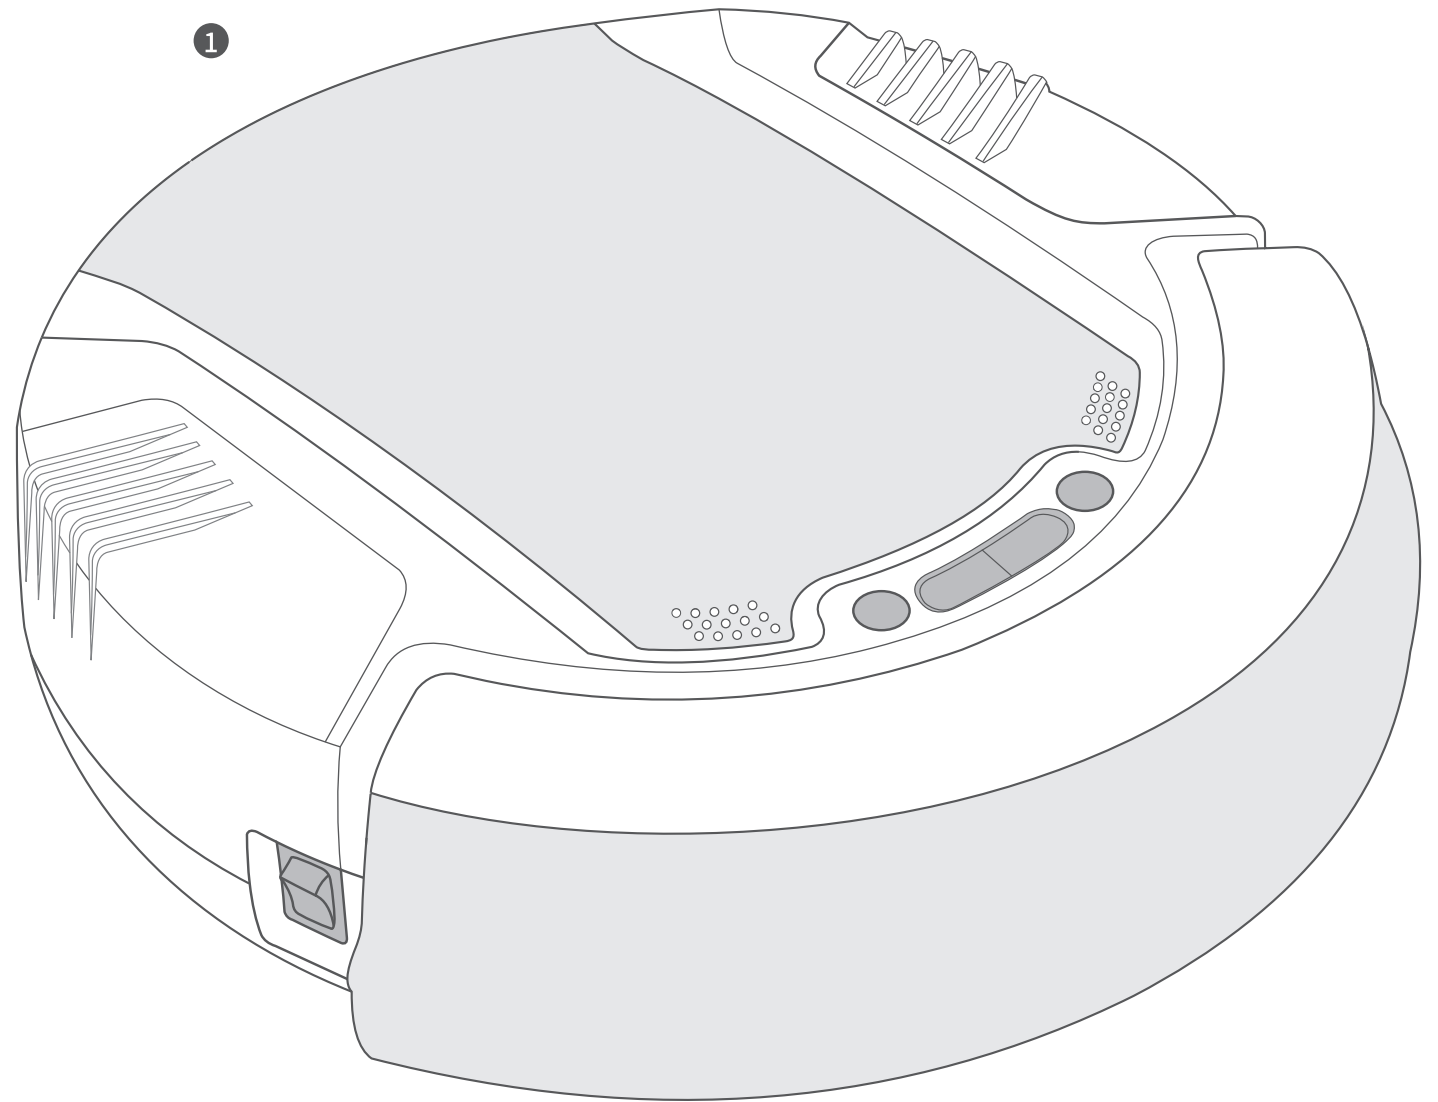

## 使用说明 Product Operation

### 使用前准备 Preparation

**!** 为使本产品发挥最佳的清洁效果，请务必将散落在地面的衣物、纸张、电线及其他易碎物品收拾好或移离地面。因本产品会沿着墙壁、家具边缘前进清扫，所以请移开或固定所有容易倾倒和重心不稳的摆设和家具。

For the best results, things like clothes, papers, wires and other fragile objects shall be put away. The appliance moves along the wall or furniture, hence it is safer to move away all furnishings that easily lose barycenter and fall.


## 使用说明 Product Operation

### 主机控制面板介绍 Control Panel

面板由2个LED灯和一个机械按键组成，如下图所示：

Control panel consists of 2 LEDs and mechanical button, as shown below:

红外信号接收器      红色指示灯      绿色指示灯      开始/暂停键  
Infrared receiver      Red LED      Green LED      Start/Pause button

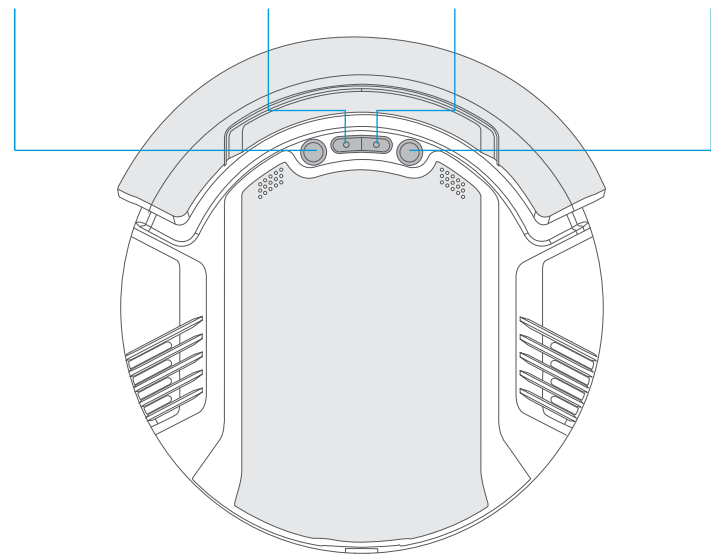


## 使用说明 Product Operation

### 电池充电 Charging

#### A. 使用电源适配器直接充电：

Charge by power adaptor:

01. 充电时，请先打开主机开关，再将电源适配器一端插入主机侧边的电源插孔，然后将另一端插至家用电源插座上，此时会呈绿灯闪烁。  
Switch the power on first, and then connect the appliance and socket with power adaptor. LED will blinking green.
02. 当主机充满电后，会呈绿灯直亮。  
After a full charge, LED will green.
03. 当主机呈红灯直亮，此时需要立即充电。  
When LED is red, the appliance needs charging immediately.

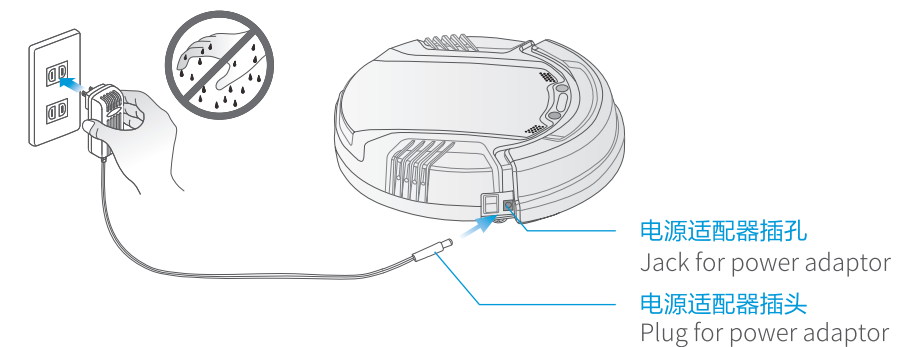


## 使用说明 Product Operation

### 电池充电 Charging

#### B. 使用充电座充电:

Charge by charge station:

01. 请先打开主机开关, 再将电源适配器一端插入充电座的电源适配器插孔。  
Switch the power on first, and then connect power adaptor with charge station.
02. 将主机后面的自动充电接触点与充电座的充电接触弹片连接。  
Connect the appliance with charge station.

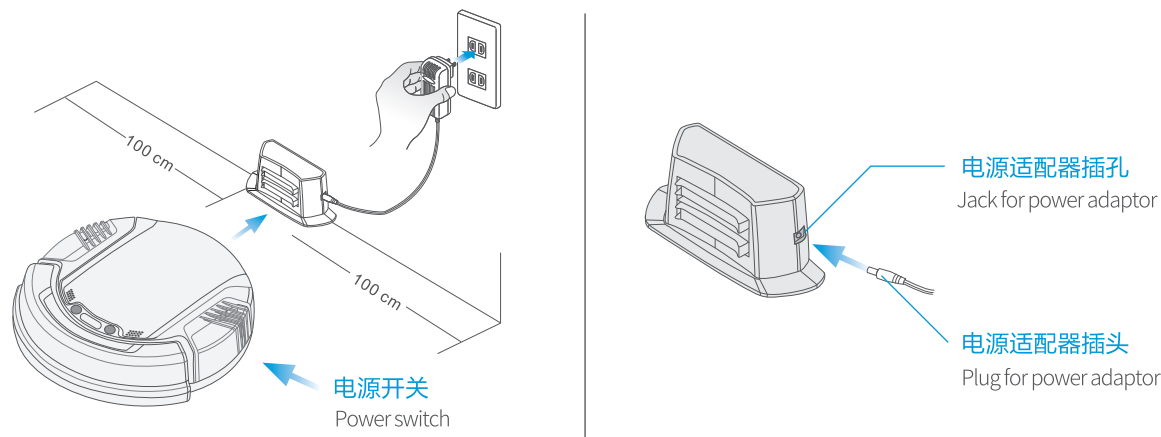

#### ⚠ 注意 Caution

当主机在充电座上, 人为挪动机器, 机器电源显示灯会变为绿色。当主机没电时, 充电座在一定的区域内发射信号, 当主机收到此信号后会自动回到充电座。

When the appliance is connected to charge station, any move caused by man will lead to green LED. When running out of battery, the appliance will receive signal sent by charge station in certain area, and goes back to charge station.


## 使用说明 Product Operation

### 电池充电 Charging

#### C. 电源灯指示说明:

Power LED:

01. 电池充电中: 绿灯闪烁  
Charging: blinking green
02. 电池充电饱电: 绿灯直亮  
Full charge: green
03. 电池电量不足: 红灯直亮  
Low battery: red

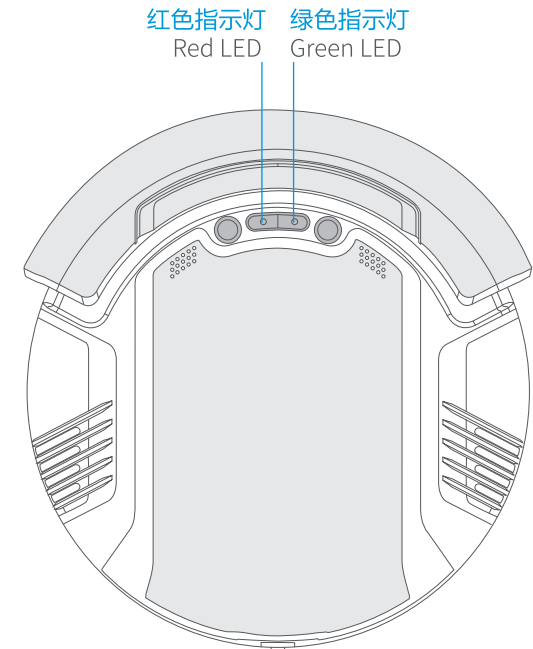

## 使用说明 Product Operation


### 遥控器控制面板介绍 Remote Controller

01. 首先打开主机关键。  
Push ON/OFF button.
02. 按下遥控器的设定按键之后, 主机将会开始依设定执行清扫。  
Press the setting button, and appliance starts to perform cleaning as required.
03. 当主机在充电座上充电时, 可用遥控器上的开始键使主机离开充电座并开始依设定执行清扫。  
When appliance is charging, press "Start" button, and appliance leaves charge station and performs cleaning as required.

## 使用说明 Product Operation

遥控器控制面板介绍

Remote Controller

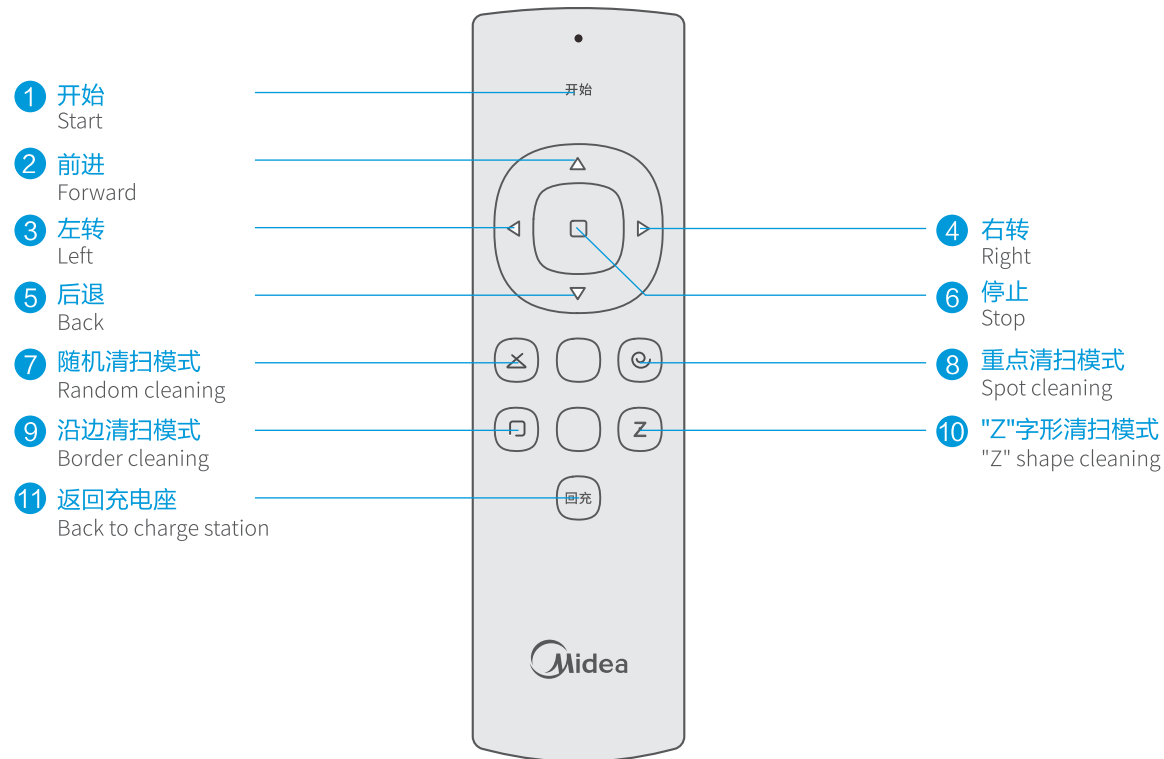

## 使用说明 Product Operation

遥控器控制面板介绍

Remote Controller

序号	按键	描述
1	开始 Start	启动主机进入自动清扫模式 Turn on the appliance and start auto cleaning modes.
2	前进 Forward	按一次，机器进入前进模式，碰到障碍物时后退约10cm后停止 Press once to start forward mode. Appliance moves forward and goes back for 10 cm after meeting an obstacle, then stop.
3	左转 Left	按一次，左转，长按则持续左转 Press once to turn left. Long press to keep turning left.
4	右转 Right	按一次，右转，长按则持续右转 Press once to turn right. Long press to keep turning right.
5	后退 Back	按一次，机器后退大约10cm，长按后退10cm不再后退 注意：机器后方底部没有跌落传感器，遥控后退时注意台阶 Press once, appliance moves back for about 10 cm. Appliance moves back for 10 cm and stops after long press. Caution: Watch out for stairs because there is no drop sensor in the back of chassis.
6	停止 Stop	按一次，机器停止工作 Press once to stop the appliance.
7	随机清扫模式 Random cleaning	机器转入随机清扫模式 Start random cleaning mode.
8	重点清扫模式 Spot cleaning mode	机器转入重点清扫模式 Start spot cleaning mode.
9	沿边清扫模式 Border cleaning mode	机器转入沿边清扫模式，进入沿墙清扫状态 Start border cleaning mode, clean along the wall.
10	"Z"字形清扫模式 "Z" shape cleaning mode	机器转入“Z”字形清扫模式 Start "Z" shape cleaning mode.
11	返回充电座 Back to charge station	任何模式下按下此键，机器会立即进入寻找充电座模式 Press to go back to charge station in any mode.


## 使用说明 Product Operation

### 开始使用 Operation

#### 01. 使用前请先检查： Check before use:

- a. 集尘盒是否已满，吸入口是否有灰尘异物卡住。  
Check that the dust bin is full, that the suction inlet is jammed with dust.
- b. 集尘盒吸入口边缘内外是否有过多灰尘依附，如有请关闭主机并对集尘盒进行清理，清理完毕请务必将滤网正确放入集尘盒内！  
Check that the edge of suction inlet is filled with dust. If it is, clean the dust bin first, then put it back properly!


#### 02. 请将主机放在房间中较空旷的地方，并打开主机电源开关，按下开始/暂停键机器开始进行清扫。 Put the appliance in an open place, switch the power on, and press the Start/Pause button to start the cleaning.

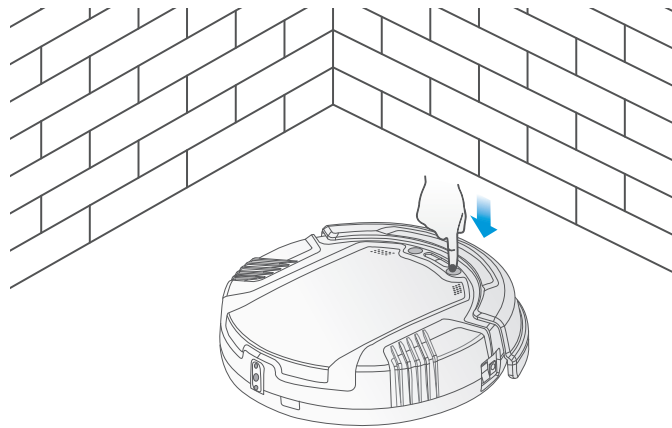


## 使用说明 Product Operation

### 开始使用 Operation

#### 03. 电力耗尽时，主机面板红灯直亮，机器停止工作，5分钟后自动进入待机模式，电源指示灯关闭。 When the battery runs out, LED turns red. The appliance stops working, and turns into standby mode 5 mins later. Power light turns off.

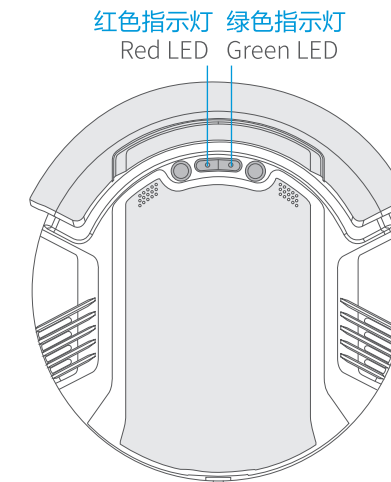

#### 04. 在待机模式下，可短按机器开始/暂停键，用遥控器长按任意键，或者进行充电均可唤醒机器。 Under standby mode, short pressing Start/Pause button, long pressing any button or charging can wake up the machine.

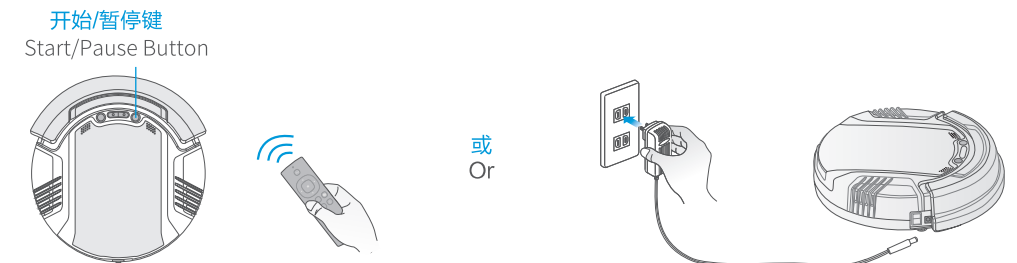

#### 05. 在开机状态下，短按主机上开始/暂停键，机器将会在自动清扫和停止间切换。 Short press the Start/Pause button for a short time in a state of power-on, then the appliance switches between auto cleaning mode and stop cleaning mode.


#### 06. 机器不用时，请按主机船型开关，机器即可关机。 Switch the power off when the cleaning is done.

## 使用说明 Product Operation


### 遥控器电池安装与拆卸

### Remote Controller Battery Installation and Disassembly

01. 请将遥控器翻转至背面，按压三角形按钮，同时往下推出电池槽即可打开电池盖。  
Turn over the remote controller and push the battery cover down to open it.

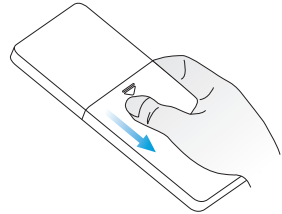

02. 将两节AAA电池按电池槽内提示正确安装电池的正负极方向，并将电池盖重新推入遥控器中。  
Install two AAA batteries properly and push the battery cover back.

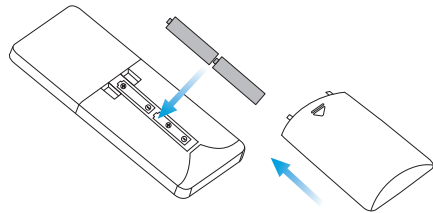

## 使用说明 Product Operation

### 毛刷安装与拆卸


### Brush Installation and Disassembly

#### 01. 安装

Installment

将毛刷直接压入毛刷座中心凸轴即可完成安装。

Fit the brush to the shaft.

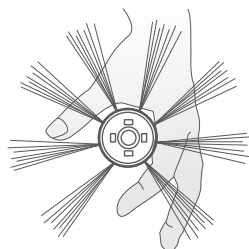


握住  
Hold

#### 02. 拆卸

Disassembly

将毛刷握住，并由毛刷座中心凸轴拔起即可完成拆卸。

Hold the brush and pull it up.

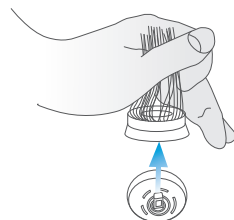

拔起  
Pull

## 使用说明 Product Operation


### 调试防跌落感应器

### Drop Sensor Test

- ⚠ 主机底部设有四段防跌落感应调节窗口，感应高度落差避免跌落，可根据高度距离、地面颜色深浅不同进行人性化调节。

There is a drop sensor window on the chassis which has four adjustable modes. Individualization setting can be adjusted based on the height, floor and color.

01. 若台阶较低，请将推钮向短距方向调整（刻度指示），以吸尘器到台阶处便后退为宜。  
If you have lower steps in your house, please choose a smaller number.
02. 若地板颜色较暗/深，请向“3”长距方向调整；反之，较亮/浅（如白色），请向“0”距方向调整。  
If the color of your floor is darker, please choose a larger number, otherwise a smaller one.
03. 调整后，请先将主机放于台阶测试后，再开始使用。  
After the adjustment, put the appliance on the steps for testing first, and then bringing it into use.

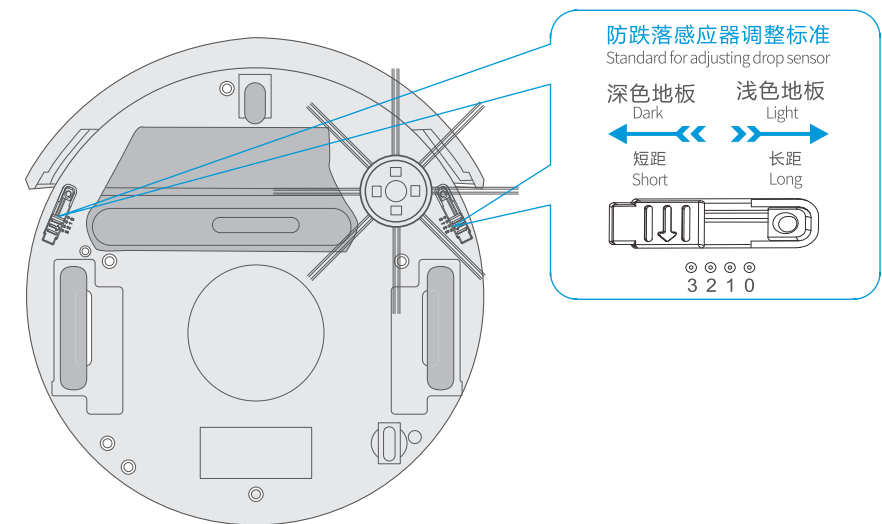


清理集尘盒  
Clean Dust Bin


01. 卸下集尘盒

Disassemble dust bin


将面盖打开，如图所示。将手放入集尘盒凹槽内，握紧集尘盒向上取出。  
Open the cover and take the dust bin out.

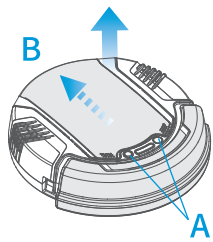

打开面盖  
Open the cover

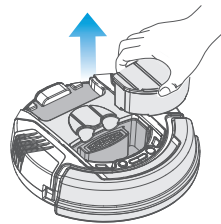

取出集尘盒  
Take out the dust bin

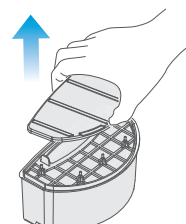


打开上盖  
Open the top cover


02. 倾倒垃圾

Dump dust

将集尘盒打开。取出内部滤网。将集尘盒内的碎屑脏污清空。  
Open the dust bin and take the filter out. Clean the dust bin.

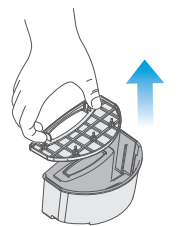

取出内部滤网  
Take the filter out

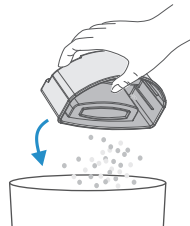


倾倒垃圾  
Dump dust

03. 清洗集尘盒

Wash dust bin

将集尘盒放在水龙头下冲洗，请勿放进洗衣机、洗碗机、或其他机器里洗涤。  
Put dust bin under a faucet. Don't put it in washing machine, dish-washing machine or other machines.

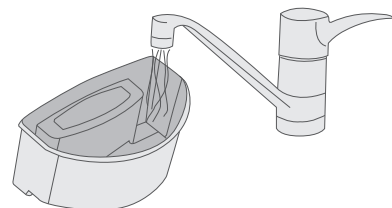


清理集尘盒  
Clean Dust Bin


04. 清洗后组装

Assemble


滤网自然干燥后，请务必依序如下图方法装回。将集尘盒装回主机，盖回上盖。  
After the filter dries naturally, put it back as shown below. Then put the dust bin back and close the top cover.

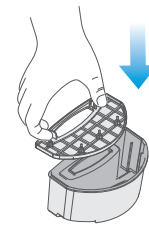

装入内部滤网  
Put the filter back

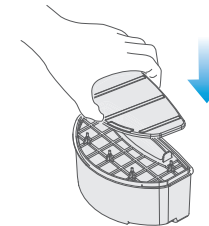

盖回上盖  
Close the top cover

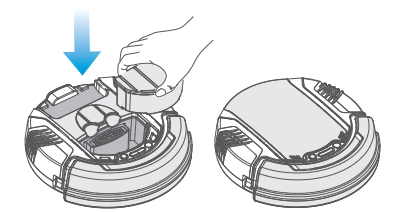


装入集尘盒  
Put the dust bin back

05. 清理滤网

Clean filter

定期用软毛刷轻轻清理滤网表面。  
Clean the surface of filter with a soft brush regularly.

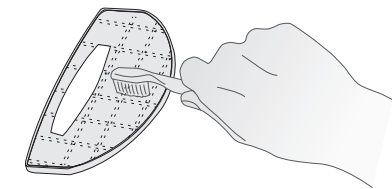



## 维修保养 Product Maintenance


### 清理吸入口 Clean Suction Inlet

**!** 经过一段时间的使用，灰尘脏污会堆积在机器底部的吸入口，所以必须定期清理让气流顺畅，以免影响吸尘效果。

The suction inlet is filled with dust after usage over a period of time, hence regular cleaning is very necessary.

**01.** 首先关闭机器电源  
Switch the power off first.

**02.** 将积在吸入口的灰尘脏污处理掉  
Clean the suction inlet.

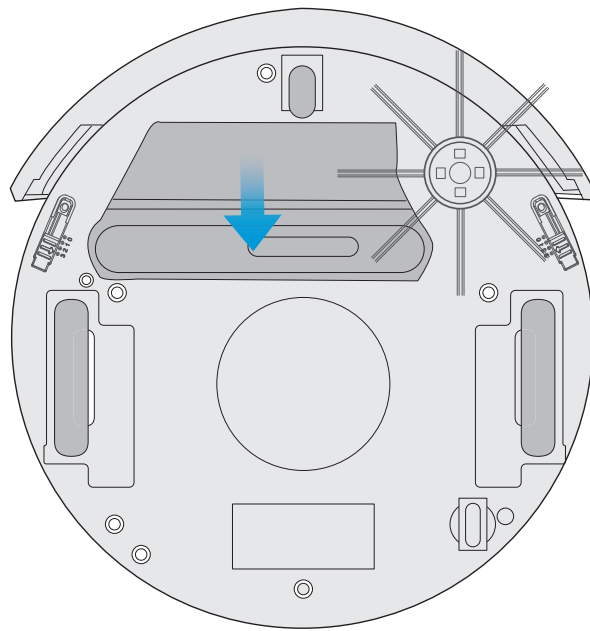


用毛刷清理吸入口灰尘脏污  
Clean up the dust in suction inlet by brush


## 维修保养 Product Maintenance

### 清理毛刷 Clean Brush


**01.** 关闭吸尘器电源，将底部朝上置于平坦的地面或桌面，将毛刷握住。并由毛刷座中心凸轴拔起，即可完成拆卸。  
Switch the power off, put the appliance in a flat ground with chassis side up, and take the brush out.

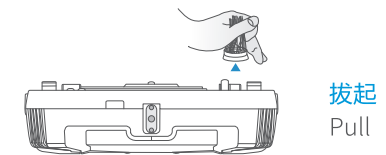

**02.** 用干净抹布将毛刷与毛刷槽擦拭干净。  
Clean the brush with a clean cloth.

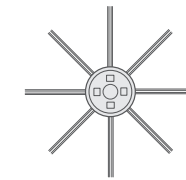

**03.** 清理完后将毛刷对准毛刷座中心凸槽装回。  
Put the brush back after the cleaning is done.

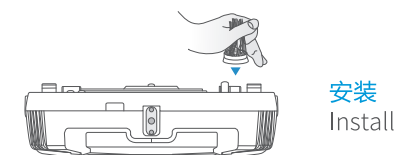

**04.** 毛刷属于易损耗部件，为了保证产品的清洁质量，请及时更换毛刷。当毛刷弯曲时垂直放入热水烫1-2分钟，即可恢复原状。  
Brush is a consumable part, hence regular replacement is necessary. Put in hot water for 1-2 minutes to recover if the brush is bent.

### **!** 注意 Caution

使用充电时，请遵照产品包装上标明的电源与电流规格，如不确定您家中的电源规格，请咨询售货人员或售后服务。请务必使用正确规格的电源适配器（19V 600mA）。电源适配器仅限室内使用。手潮湿时，切勿触碰电源适配器及其插头与电源线。

Please follow the instruction on the package when charging. If you are not sure with the specs for power in your house, please contact with our after-sales staffs. Make sure to use the exact power adaptor (19V 600mA). Power adaptor is for indoor use only. Do not touch power adaptor, plugs or wires with wet hands.

## 异常处理 驱动类故障

本品在使用时如发现异常，请先查阅下表。

异常描述	可能原因	处理方法
开机后红灯直亮	- 电池储电不足	- 将电池电量充满
毛刷卷曲不能使用	- 使用时间过长造成	- 用热水烫过即可恢复原状
无法开机	- 电池电量过低	- 请将电池电量充满
主机一直绕圈	- 左轮或右轮连接器脱落	- 打开大轮盖，将连接线插座插牢或送检
开机后倒退行走	- 地板颜色较暗/黑 (地面反射力差)	- 将主机底部防跌落感应器同时往 长距方向调整 ( “1” “2” 或 “3” )
开机后红灯和 绿灯同时长亮	- 主机大轮卡死 - 主机毛刷缠住	- 请将故障排除 - 请将毛刷缠绕处理清理干净
绿灯或红灯单独闪烁	- 主机离地或机器被提起	- 将机器重新放在地上
开机后无法吸尘	- 集尘盒内滤网未正确装入	- 将滤网正确装入集尘盒



注意

其他无法处理的故障，请联系当地售后服务网点或拨打全国服务热线：400-8899-315。

## TROUBLESHOOTING

### Troubleshooting for Machinery

In case of mis-function, please refer to the following table.

Describe	Reason	Solution
<b>LED turning red after turn the power on</b>	- Low battery	- Charge to 100%
<b>Brush being bent</b>	- Usage over a long period of time	- Put in hot water for 1-2 mins
<b>Cannot turning on</b>	- Low battery	- Charge to 100%
<b>Keep circling around</b>	- Connectors of left or right wheel falling off	- Put the connector back or submit for inspection
<b>Moving backward after switch the power on</b>	- Dark floor	- Adjust the drop sensor, choose a large number
<b>LEDs turning red and green respectively after switch the power on</b>	- Main wheel tucked - Brush entangled	- Debug - Clear the entanglement
<b>LED turning green or red</b>	- The appliance lifted	- Put the appliance on the ground
<b>No vacuuming after switch the power on</b>	- Dust bin assembled improperly	- Assemble the dust bin properly



Caution

If any malfunctions that cannot be handled properly, please contact local after-sales, services or call National Service Hotline: 400-8899-315.

## 异常处理 常见问题

本品在使用时如发现异常，请先查阅下表。

### 1. 正常充满电的情况下，机器可以工作多长时间？

答：视不同的地面情况，正常木质地板、瓷砖等平整地面大约50分钟。

### 2. 机器可否在无人照看的情况下进行工作？

答：可以，但在使用前，请先告知室内人员知道，防止有人跌绊。

### 3. 机器的使用步骤是怎样的？

答：给机器充满电→安装好毛刷→打开主机开关→按主机开始键或遥控器开始键。

### 4. 机器会不会从楼梯跌落？

答：不会，机器底部有防跌落感应器，可自行感应高度距离。

### 5. 机器碰到障碍物怎么办？

答：机器前方有防撞条装置，碰到障碍物后会自动转头或寻找其他行走途径。

### 6. 有坡度的地毯能清扫到吗？

答：机器拥有强劲的电机驱动底部滚轮，能越过15°左右的坡面和障碍。

### 7. 机器可否清洁家具的底部？

答：超薄机身的设计，可运行到各家具的底部清扫平时难以打扫的角落。

### 8. 机器是否会影响到宠物？

答：不会，机器工作时声音较轻，不会有明显尖锐刺耳的声音产生，所以不会使宠物产生焦躁不安的情绪。如果您家中有宠物，建议在第一次使用产品时注意观察。

### 9. 产品不小心吸取了液体怎么办？

答：立即关闭电源开关，将集尘盒取出清空并擦干。并将滤网和其他零件全部晒干，晒干时间至少12小时，以确保电路板干燥，再重新开启机器。

### 10. 第一次使用时间只有20分钟？

答：所有电池在出厂时只会充30%左右电量，主要是为了便于运输。所有您收到的机器只存在一部分虚电，需要使用完之后连续充放电3次，前3次充电12小时电池会被慢慢激活。

## TROUBLESHOOTING

### Usual Problem

In case of mis-function, please refer to the following table.

### 1. Q: How long can the product work after a full charge?

A: It depends on the ground conditions, normally about 50 minutes when working on wooden floor or tile floor.

### 2. Q: Can the product work without supervision?

A: Yes. But watch out for being stumbled.

### 3. Q: What steps should takes to bring the product into use?

A: Charge → Assemble brush → Switching the power on → Press the Start button.

### 4. Q: Does the product fall down stairs usually?

A: No. The product is equipped with drop sensor.

### 5. Q: What if the product meets an obstacle?

A: The product is equipped with bumper. It turns around and finds another path when meeting an obstacle.

### 6. Q: Can the product clean the carpet with slope?

A: The robot have a powerful motor that drives the bottom roller, so it can cross about 15° slopes and obstacles.

### 7. Q: Can the robot clean bottom of furniture?

A: Design of ultra-thin main body, it can clean bottom of furniture and other corner.

### 8. Q: Would the machine affect pets?

A: No, The robot works with a light voice so it will not bother your pets. Pay attention to the behavior of your pets when the robot is used for the first time.

### 9. Q: What if the product get wet ?

A: Turn off the robot immediately, take the dust bin out and wipe it clean. Then take the filter and other parts out and dry them for at least 12 hours to make sure that the electric board dries naturally. At last, turn on the robot.

### 10. Q: Is the first use only 20 minutes?

A: All Batteries only have about 30% electric quantity when they leave the factory, mainly in order to transport. The machine you receive only has fractional electricity, you need to charge and discharge 3 times after use, first three times need charging 12 hours, the battery will be slowly activated.



零部件名称	中国RoHS管控物质或元素						备注:
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚	
电子电路	×	○	○	○	○	○	1. 本表格依据SJ/T 11364的规定编制。 2. ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 3. ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。 4. 本表中的有×的所有部件均符合欧盟的RoHS指令, 即“欧洲议会和理事会关于在电子电气设备中限制使用某些有害物质的第2011/65/EU号指令”及其修正案。
开关	○	○	○	○	○	○	
电源适配器	×	○	○	○	○	○	
电池组件	○	○	○	○	○	○	
吸尘电机组件	○	○	○	○	○	○	
边刷电机组件	○	○	○	○	○	○	
大轮组件	○	○	○	○	○	○	
遥控器组件	○	○	○	○	○	○	
过滤组件	○	○	○	○	○	○	
边刷组件	○	○	○	○	○	○	
前轮组件	○	○	○	○	○	○	
尘杯组件	○	○	○	○	○	○	
机体组件	○	○	○	○	○	○	
上盖组件	○	○	○	○	○	○	
充电座组件	○	○	○	○	○	○	

## 产品参数 产品技术参数

项目	参数	项目	参数
直径	285mm	充电类型	手动充电/自动充电
高度	76mm	清洁模式	自动, 重点沿边, Z字轨迹
电压	14.4V	充电时间	约5小时
电池规格	800mA	清洁时间	50分钟
集尘盒容量	140ml	主按键类型	硬质按键
净重	1.8kg		

使用范围: 一般住家和小型办公室使用。本产品适用的地面环境有: 木地板、瓷砖, 短毛地毯。



Name of parts	Chinese RoHS controlled substances or elements						Remarks:
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBBs)	(PBDEs)	
PCB	×	○	○	○	○	○	1. This table is formulated based on the provisions of SJ / T 11364. 2. ○: Indicates that the content of this hazardous substance in all the homogeneous materials of the part is lower than the limit requirement prescribed in GBSJ / T 26572. 3. ×: Indicates that the content of this hazardous substance in a certain homogeneous material of the part has exceeded the limit requirement prescribed in GB/T 26572. 4. All the parts with * in this form are in accordance with EU RoHS instructions, namely "No. 65/2011 / EU Instruction of European Parliament and Council on Restrictions on the Use of Certain Hazardous Substances in Electrical and Electronic Equipment" and its amendment.
Switch	○	○	○	○	○	○	
Power adaptor	×	○	○	○	○	○	
Battery	○	○	○	○	○	○	
Main motor assembly	○	○	○	○	○	○	
Motor for side brush assembly	○	○	○	○	○	○	
Big wheel assembly	○	○	○	○	○	○	
Remote controller assembly	○	○	○	○	○	○	
Filter assembly	○	○	○	○	○	○	
Side brush assembly	○	○	○	○	○	○	
Front wheel assembly	○	○	○	○	○	○	
Dustbin assembly	○	○	○	○	○	○	
Main body assembly	○	○	○	○	○	○	
Top cover assembly	○	○	○	○	○	○	
Charging station assembly	○	○	○	○	○	○	

## Product technical parameters

Item	Parameter	Item	Parameter
Diameter	285mm	Charging way	Manual/Auto
Height	76mm	Cleaning modes	Auto, spot, edge, Z shape
Voltage	14.4V	Charging time	About 5 hours
Battery specification	800mA	Working time	50 minutes
Dust capacity	140ml	Button type	Hard button
Net weight	1.8kg		

Using rage: regular homes and small offices.The suitable ground environment for this product: Wood floor, Tile, Undercoat carpet.

## 安全说明



- 只有授权的技术人员方可拆解本产品，严禁自行拆解本产品。
- 本产品只能使用包装原配备的电源适配器，若使用其它适配器将可能导致产品受损。
- 双手潮湿时请勿接触电线、插座或电源适配器。
- 请勿使布帘、各类缠绕物质或者用户身体部位卷入产品驱动轮。
- 请勿将本产品靠近烟头、打火机或者其他明火。
- 如果产品需要清洁，请在充电结束后对本产品进行清洁。
- 请勿过度折弯电线，或将重物及尖锐物品搁置于机器之上。
- 本产品为室内家用产品，请勿在户外使用。
- 本产品禁止 10Kg 以上物品（人）重压。
- 请勿在潮湿环境中使用本产品（如浴室），勿吸取液体。
- 使用本产品前，请移除地面所有易损物品（如玻璃杯、灯具等）以及有可能缠住边刷和吸风通道的物品（如电线、纸片、窗帘等）。
- 请勿将本产品置于易掉落的地方（如桌椅上）。
- 运输过程中或长时间不使用本产品时，请关掉机器底部的电源开关。
- 充电前请仔细检查电源适配器是否已和插座连接好。
- 预防绊倒，本产品工作时请告知房间内的其他成员。
- 储尘盒已满时请先清空再使用本产品。
- 本产品使用环境温度为0℃至40℃。
- 请勿在高温环境下使用本产品。
- 本产品报废前请将电池从机器上拆下。
- 用户需要根据遥控器使用情况，及时更换电池，并将废旧电池安全回收。
- 严禁在没有专人的指导下，儿童、弱障或缺乏家电产品使用常识和经验的人使用本产品。
- 严禁在高于人员身高的悬空区域使用本产品，防止机器跌落造成人员伤害！
- 严禁在没有防护围栏的开放区域使用本产品！
- 请勿自行拆卸主机电池，如需更换请联系售后维修人员。
- 在强光照射下，产品可能无法正常工作。

## SAFETY INSTRUCTIONS



- Only the certified technician can disassemble this product. Users are strictly not allowed to disassemble this product.
- This product shall only be charged using the included power adapter. Other power adapters may cause damages to this product.
- Do not touch power cord, plug or adapter with wet hands.
- Avoid curtains, any kind of strings or user's body part entangled in the wheel.
- Keep this product away from cigarette stubs, lighters or flame.
- This product must be fully charged before any cleaning process.
- Do not over-bend the power cord, or place heavy or sharp objects on this product.
- This product is intended for indoor use only, do not use this product outdoors.
- Do not place object (e.g. human) with more than 10KG weight on this product.
- Do not use this product in wet or moist environment (e.g. bathroom).
- Before using this product, please remove any fragile objects (e.g. glasses, lamps etc) from the floor. Also remove any object that may be wrapped up to the side brushes or may block the suction inlet.
- Do not put this product on table or benches to avoid falling off.
- While transporting or not using the product for long time, please turn it off from the bottom.
- Before charging, please check that the power adapter and socket is connected well.
- When this product is cleaning the house, please inform other members to avoid them to trip over.
- When the dust bin is full, empty it before using this product.
- This product is functioning at temperature range within 0°C - 40°C.
- Do not use this product in high-temperature environment.
- Please remove batteries from this product before disposal.
- Replace the batteries of the remote control according to conditions. Depleted batteries should be disposed safely.
- Children, and person with reduced physical, sensory or mental capabilities, or lack of household appliances experience and knowledge are not allowed to use this product.
- Do not use this product in the over hanging area above user height to preventing it from falling that can cause harm to people !
- Do not use the product in open areas without guardrails !
- Please do not remove the batteries, contact maintenance staff if necessary.
- The machine may not function properly in a strong light.

## 保修须知

美的真空吸尘器严格遵照国家“三包”规定进行保修服务  
用户在正常使用产品的情况下，提供相关免费维修服务



- 家庭整机保修两年，电机保修三年，边刷保修三个月，电源适配器、电池保修半年；
- 非家庭整机及其主要部件保修半年；  
如：经营、商用、公司集体的产品。
- 保修期内用户可享受免费上门维修（特殊地区除外）服务；  
“免费上门维修”限桶吸产品。
- 保修期界定：
  - 1.以有效保修凭证的开具日期作为保修期的起始日期；
  - 2.没有有效保修凭证的，按出厂日期后6个月作为保修期的起始日期；
  - 3.若既无有效保修凭证也无出厂日期的，则按该产品的最早上市日期后6个月作为保修期的起始日期；
  - 4.网购产品15天界定期以收货日期计算，后期保修可按发票日期计算。
- 保修期内维修更换的零部件归本公司所有，保修期外维修更换的零部件归用户所有；
- 其他事项按照国家“三包”规定执行；
- 凡属下述情况之一的，不在保修范围内：
  - 1.吸尘器附件（充电座、抹布、遥控器、小附件等），耗材（滤芯等）和赠品；
  - 2.用户搬运、使用、维护、保管不当而损坏的；
  - 3.使用充电电压低于187V或者高于240V而损坏的；
  - 4.未按产品使用说明要求使用、维护、保养而造成损坏的；
  - 5.非本公司专业服务人员拆卸、维修的；
  - 6.因不可抗力（如雷电、火灾、地震、水灾等自然灾害）造成损坏的；
  - 7.产品超出保修期的；
  - 8.发票或保修卡上记录的型号或编号与商品实物不符合的。
- 以上情况我公司将实施收费维修，费用类型包括维修费、零部件费，具体费用标准在相关部门允许范围内。
- 由代理商、经销商、零售商自行承诺的额外服务与附加的非原厂配置赠品，由原代理商、经销商、零售商负责服务。

### ⚠ 注意

1. 本产品只限于家用，非家用出现任何问题本公司概不负责。
2. 如您发现产品需要服务时，请直接联系当地特约服务网点或我司服务 热线400-8899-315。
3. 如来信，请留下您的联系电话，以便您能尽快得到回复。

## WARRANTY INFORMATION

Midea appliance strictly comply with government policies .  
Our company provide free maintenance service for the products operated under normal usage.

- Two-year warranty for household machine, three-year warranty for motor, three-month warranty for side brush, and six-month warranty for power adaptor.
- The warranty period (including main components) is six months for non residential or non home usage. It applies to, but not limited, business offices, commercial entities, cleaning companies fleet of appliance.
- During the warranty period, you will benefit from no cost home maintenance services. (except for some special areas). the no cost maintenance is only applicable to the barrel products.
- Definition of the warranty period:
  - (1) The date for issuing the valid warranty certificate should be taken as the starting date of the warranty period.
  - (2) Without a valid warranty certificate, the first day after 6 months from the delivery date should be taken as the starting date of the warranty period.
  - (3) If there is no valid warranty certificate, no packaging date, the first day after six months from market release should be taken as the starting date of the warranty period.
  - (4) Date is defined as being 15 days after receiving the products; the warranty period will start from that date.
- The manufacturer is responsible for replacing the components during the warranty period.  
Components replacement is the responsibility of the user beyond the warranty period.
- Other matters follow the government policies.
- The warranty does not apply to the following situations:
  - (1) Appliance accessories (metal extension tube/plastic tube, hose, floor brush, small accessories, etc.), some parts (filter, dust bag, etc.) and gifts.
  - (2) The appliance is damaged due to improper usage (including storage) and operation by the user.
  - (3) The appliance is damaged due to incorrect charge voltage utilization (below 187 V or above 240 V).
  - (4) The appliance is damaged due to failure of following procedures as described in this manual for maintenance, cleaning and usage.
  - (5) Disassembly, repair by people other than the company's specialized service personnel.
  - (6) Damages due to natural causes (such as lightning, fire, earthquake, floods and other natural disasters).
  - (7) The warranty period has expired.
  - (8) The product type or serial number noted on the invoice or warranty card is not in conformity with the actual product.
- If any of the above written situations arise, the user will solely bear all the charges related to the maintenance including the cost of spare parts. The cost is defined according to standard charges.
- Any commitment for extra services, additional gifts made by original agents, distributors or retailers are their sole responsibility and the manufacturer cannot be held responsible or liable.

### ⚠ Caution

1. This product is limited for home usage and the company is not responsible for any problems caused by other usage.
2. For service, please directly contact the local special service outlet or our service hotline 400-8899-315.
3. Please indicate your contact phone number or email for faster response.

# 保修卡

## WARRANTY CARD

保修卡	维修记录
用户姓名	日期
电话	故障内容
通讯地址(邮编)	产品型号
购买商店	处理内容
维修点	维修单位名称
编号	电话
发票号码	维修员签名
购买时间	

Warranty card	Record of Maintenance
User name	Date
Tel	Problem description
Contact address (Post code)	Product model
Purchase location name and address	Detailed information
Service/maintenance supplier	Service technician name
Serial No.	Tel
Invoice No.	Service technician signature
Purchase date	

**tips** 修理时需出具发票 Original proof of purchase (store invoice) is required for any service request.

### 注意 Caution

1. 此保修卡在购买本公司产品时立即填写。
2. 此保修卡请妥善保存，购买者不必将卡寄回本公司。
3. 维修时请携带此证及有效发票正本。

1. This warranty card should be immediately filled after purchase.
2. Keep this warranty card for your records; it does not need to be returned to Midea.
3. Bring / provide the warranty card and original invoice for service requests.

