

本文件含有美的集团的保密信息
禁止任何人未经授权以任何形式使用
包括但不限于全部或部分地泄露、复制或散发

绝密

Table with 3 columns: 代码 (Code), 可能原因分析 (Possible Cause Analysis), 解决对策 (Solution). Rows include E1 (motor base water), E2 (blade assembly), C3 (circuit board), and E0 (circuit board).

表示【禁止】的内容: 工作过程中, 禁止提拿研磨杯, 以免引起事故或者造成损坏。
表示【强制】的内容: 本产品仅限于与本产品适配的破壁机产品共同使用。
表示【注意】可能造成轻伤或者财产损失的事项: 一些重要零部件, 如保险丝等维修不当或私自短接可能使产品保护失效, 导致过热或火灾。
表示【温馨提示】的内容: 如产品图片与实物不一致, 以产品实物为准。

保修卡 (Warranty Card) form with fields for user name, purchase date, and serial number. Includes QR code and Midea logo.

使用说明 (User Manual) for 精钢研磨杯 (Precision Steel Grinding Cup). Includes QR code, Midea logo, and contact information: TEL 400-8899-315.

产品简介 (Product Introduction) for 部件展示 (Component Display). Includes images of the grinding cup and its parts, and a table of product parameters.

使用说明 (User Manual) for 研磨杯使用方法 (Grinding Cup Usage). Includes step-by-step instructions with diagrams and safety warnings.

3 将盖好杯盖的研磨杯安装到主机上。 (Install the grinding cup with the lid on the main unit). Includes diagram and safety notes.

5 研磨功能结束后, 双手握住杯盖手柄并按压卡扣按键到底, 然后将研磨杯向上提出。 (After grinding, hold the handle and press the button to lift the cup). Includes diagram and safety notes.

清洁保养 (Cleaning and Maintenance) and 服务指南 (Service Guide). Includes cleaning instructions and an environmental protection table.

Table with 2 columns: 部件名称 (Component Name) and 有毒有害物质或元素 (Toxic Substances or Elements). Lists lead, mercury, cadmium, etc.

Table with 2 columns: 物料编码 (Material Code) and 公差 (Tolerance). Includes technical requirements for the manual, such as paper weight and dimensions.

Barcode: 16167000000781-XX
备注: 条码生成规则: Code128. 数字部分为物料编码, XX为供应商简称.

Table with 6 columns: 标记 (Marking), 外数 (Outer Number), 分区 (Zone), 更改文件号 (Revision Number), 签名 (Signature), 年、月、日 (Date).

70g双胶纸 (70g Double Glue Paper) section. Includes Midea logo, '说明书' (Manual), and 'BL12YMZD-101'.