



sprinklers or swimming pools. This product does not take into account the use of appliances by unattended children and the disabled, and children's playing with appliances. This situation may lead to accidents. [note] matters that may cause minor injury or property damage [warning] Indicates safety matters that may lead to death or serious injury. 1.Before use, please check whether the voltage used is the same as the voltage marked [warm prompt] Indicates other safety matter.

[note] Indicates safety matters that may cause minor injury or property damage. [warning] key safety matters 1.The power supply of this machine is 220V-, and the bearing capacity of the socket

should not be less than 10A. Please confirm that the rated current of the power socket meets the requirements before use, otherwise the socket should be replaced. 2.If the product has power-off protection and cannot continue to be used, please unplug the power cord plug, leave the machine still, and plug in the power cord plug again after cooling, so as to restore normal use; If the machine still cannot be used at this time, please shut down immediately, unplug the power cord and send it to the nearby special maintenance point for professional maintenance. Non full time personnel or unauthorized repairmen are not allowed to repair or transform this machine by themselves. 3.Check whether the power cord and plug are damaged before use. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments. 4.If the product is faulty, please shut down the machine immediately, unplug the power cord and send it to a nearby special maintenance point for professional

11.It is forbidden to share sockets with other high-power appliances, and it is forbidden

to directly pull the power cord to move the product.

maintenance. Non-specialist personnel or unauthorized repairmen are not allowed to 1.This product is only suitable for indoor use, not outdoor use. repair or transform this machine by themselves. 2.After cleaning and maintenance, be sure to wait until it is fully dry before being powered 5.It is forbidden to plug (unplug) the power cord to replace the power switch on and off. on for use or collection. 6.In order to avoid the danger caused by the false reset of the thermal circuit breaker, 3.Please unplug the power cord when it is not used for a long time. It is recommended the appliance cannot be powered by an external switching device, such as a timer or to wrap it in the original package and store it in a dry place. connected to a circuit that is regularly turned on and off by general components. 4. Avoid bumping or scratching the product to avoid surface coating damage and rust. 7.Do not cover the heater to avoid overheating. 5.The heater shall be filled with a certain amount of special oil. If the oil container needs 8.It is forbidden to use near inflammable, explosive, easily deformed, discolored and to be opened during repair due to leakage, the work can only be completed by the deteriorated objects or places with serious dust. manufacturer or contacted with the after-sales service agent of the manufacturer. 9.It is forbidden to use in places where there are hanging objects that are easy to fall, 6. When the heater is discarded, it shall comply with the relevant provisions on oil vulnerable to impact or unstable placement. When using the product, it should be placed stably, please do not overturn or tilt. 7.During initial heating, there may be a slight sound, which is a common phenomenon 10.It is forbidden to insert fine wire or other foreign matter into any hole in the machine when the heat transfer oil is heated, and it can be used safely. and tilt it. To avoid electric shock accidents.

2. When the product is in normal use or idle, it should be more than 1.5 meters away from

3.Because the coverage or incorrect placement of the heater will cause a fire, it is not

allowed to use the programmer, timer or other devices with automatic power on to

4. When the product using, the power cord should be placed behind the machine body.

Placing it in front of the machine body will overheat and damage it, and even cause

5. When using the product, in order to avoid burns, please do not let bare skin directly

6.Before cleaning this product, be sure to turn off the power switch and unplug the plug,

7.Children, the elderly or patients who have lost the ability to take care of themselves should

8.The heat expansion and cold contraction at the joint of the heat sink of some products

may cause a few fine lines on the paint surface, which is a normal phenomenon and can

the fire source and kindling, and avoid direct sunlight.

and then clean it after the product is completely cooled.

use the product under the supervision of adults to prevent accidents.

use the product.

safety accidents.

be safely used.

contact the surface of the air outlet.


[tips] other safety matters


2.No matter in which mode, the temperature sensor has short circuit or open circuit protection, the digital screen displays "E2" or "E1" which is always on, and pressing any key will not work. The buzzer buzzes for 10 times. 3.No matter in which mode, the temperature sensor has short circuit or open circuit protection, the digital screen displays "E2" or "E1" which is always on, and pressing any key will not work. The buzzer buzzes for 10 times. 4.When the machine is turned on and the indoor ambient temperature th exceeds 50 $^\circ$ C, the system will turn off all outputs, the buzzer will sound for 10 times, and the digital screen will display "FF" and flash at the frequency of 1 time / s. pressing any key will not work. The protection can only be exited after power failure. 5.In order to prevent scald risk, the product has an automatic adjustment function.


temperature is low, it will automatically upshift.


This section describes the contents and importance of safety matters to prevent personal injury or property damage to users or others. Please read the text on the basis of fully understanding the following contents, and be sure to observe the safety precautions described.


When the ambient temperature is high, it will automatically downshift, and when the

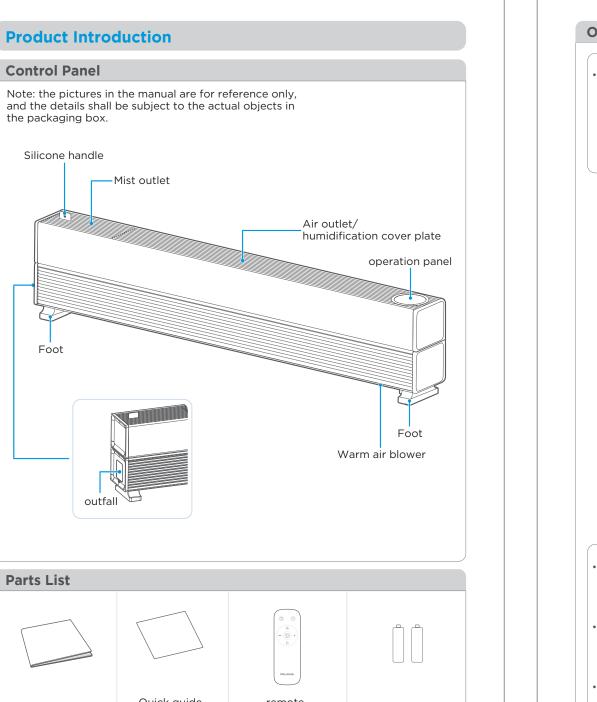


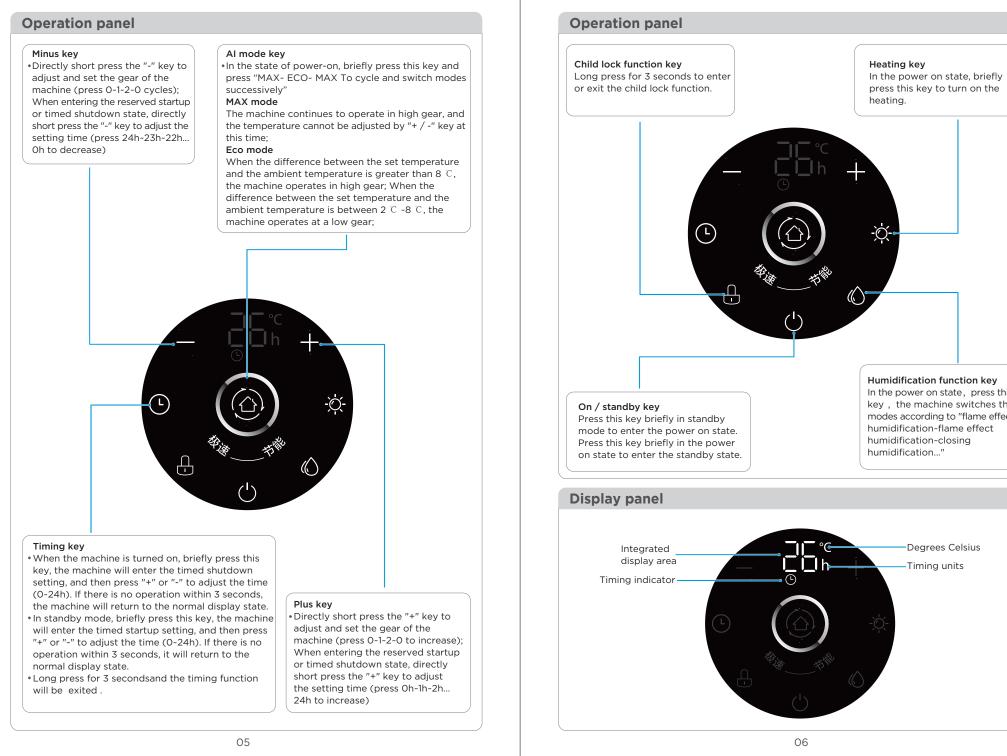


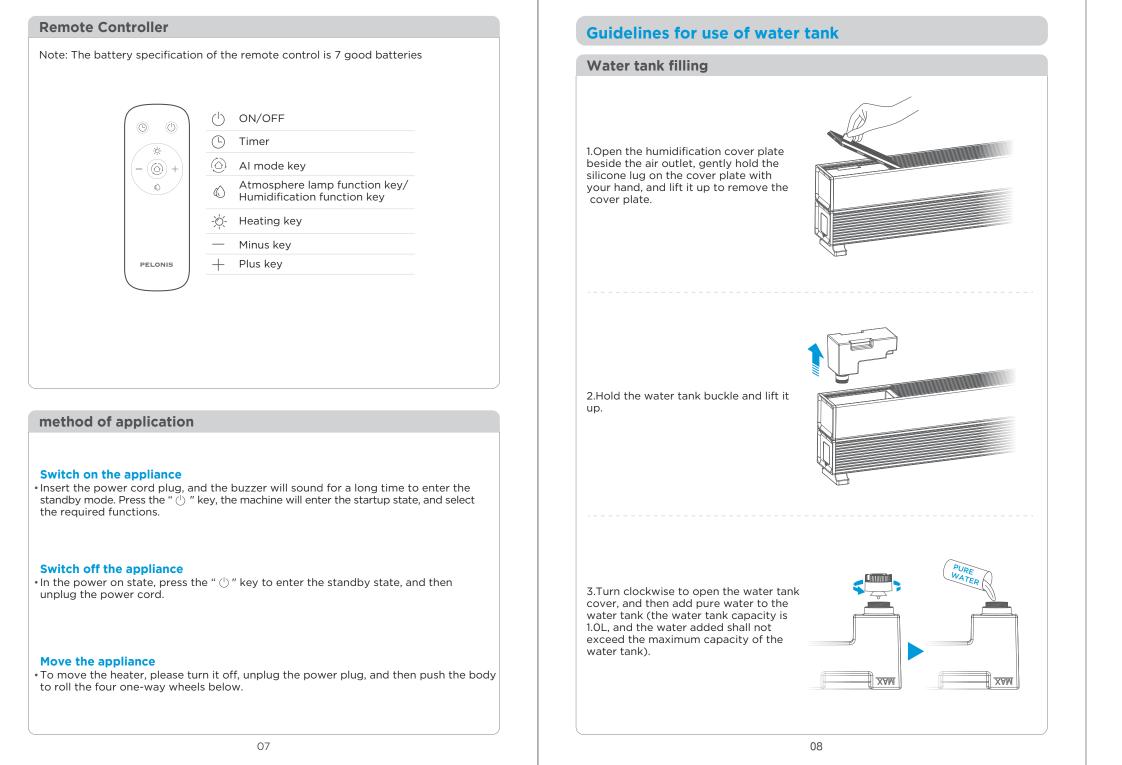

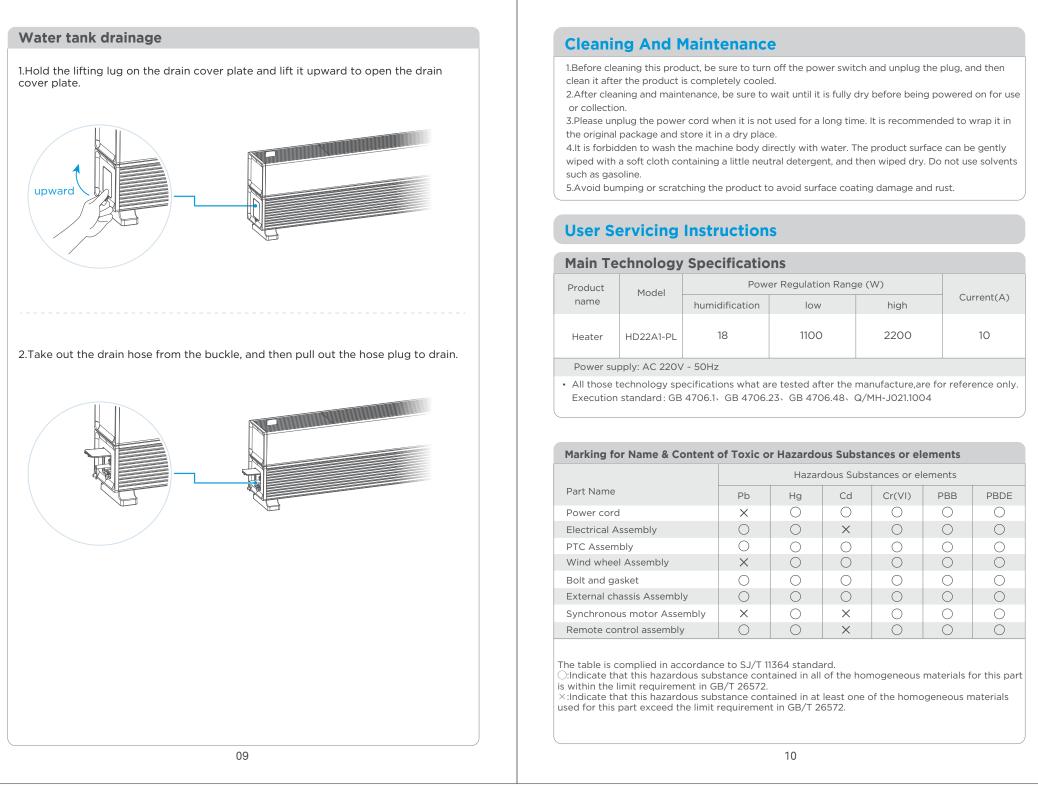


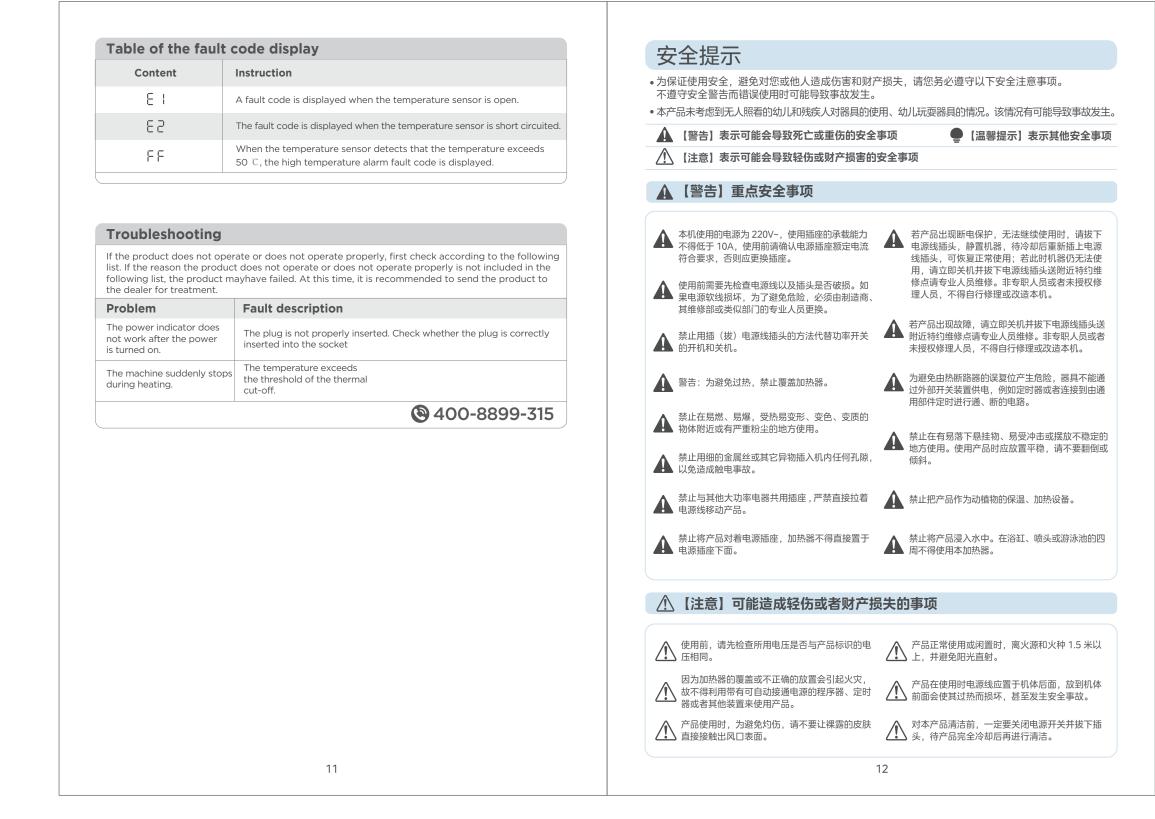

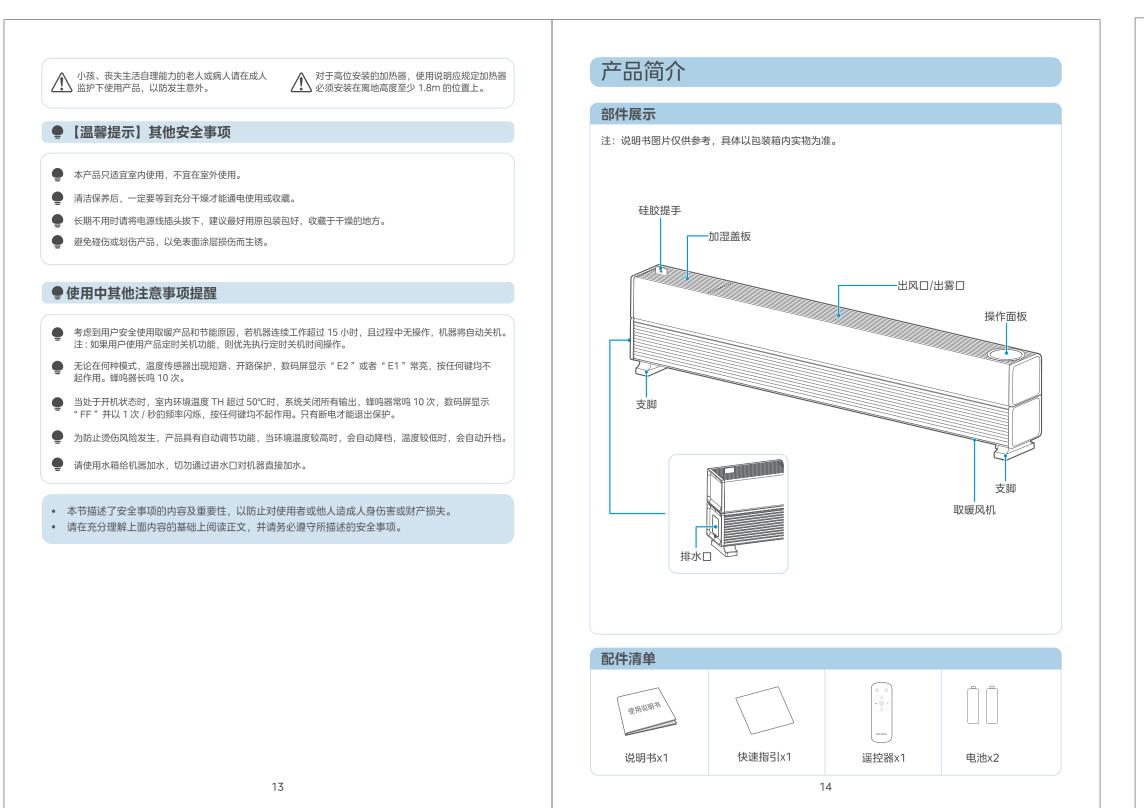

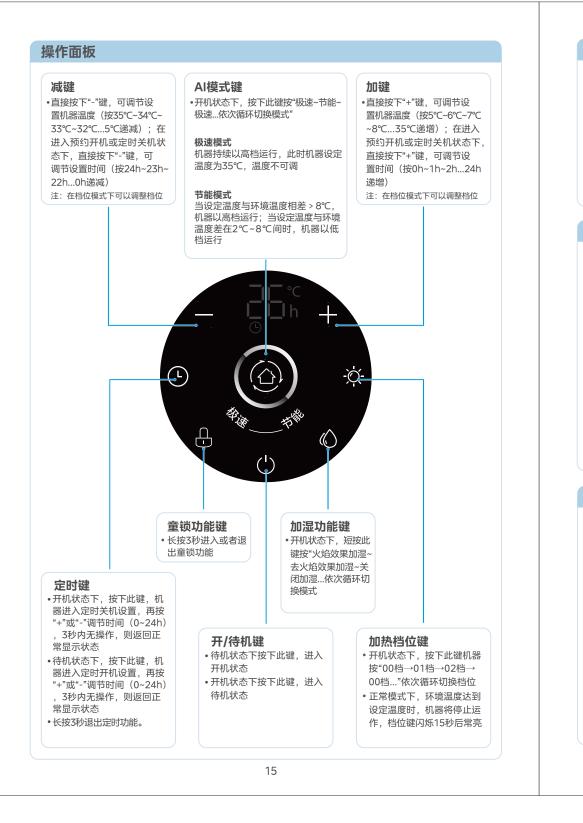



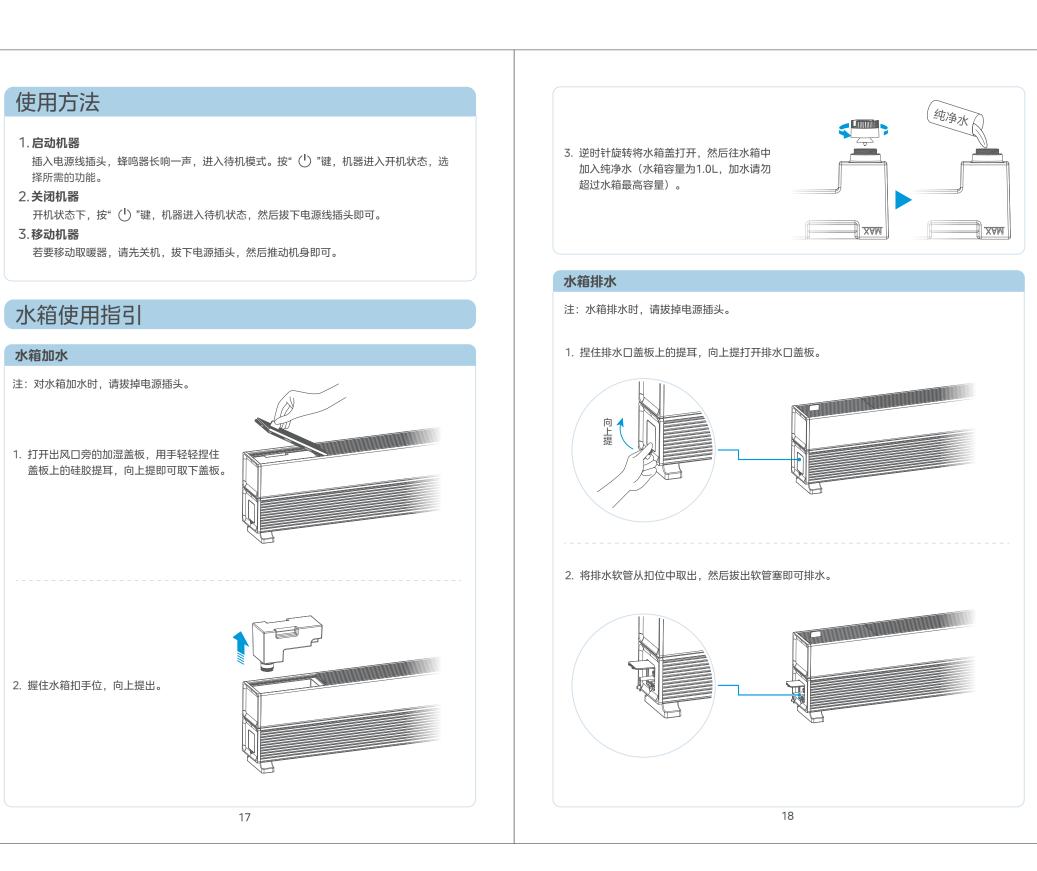







	说明书技术要求										
 物料编码	16157000001843										
产品型号	HD22A1-PL 公差 ±2.0mm										
客户名称	PELONIS 成品尺寸 145x210mm										
材质	□ 80g双胶纸 □ 128g铜版纸 <mark>√</mark> 其它: 128g哑粉纸										
印刷颜色	□ 单色 V 两色 □ 四色(CMYK) □ 四色(CMYK)+专色										
专色数量	▼ 无										
表面处理	□ 无 □ 光油 □ 光胶 ▼ 哑胶 □ 其它:										
成形方式	□ 单张✓ 钉装□ 胶装□ 折页□ 风琴折□ 包心折□ 其它:										

							128g哑粉纸				
标记	外数	分区	更改文件号	签名	年、月、日						
设计	蓝锦先	2022-8-18	标准化			ß	介段标记	重量	比化		
校对							В		重量	1.	
审核							D		里里	1:	
工艺	蓝锦先	2022-8-18	审批				共 1	张	第 1	张	

HD22A1-PL_SMS-01

1 张 第 1 张